



Motion Platform Work Envelope - Heave vs Pitch






Motion Platform Work Envelope - Heave vs Roll

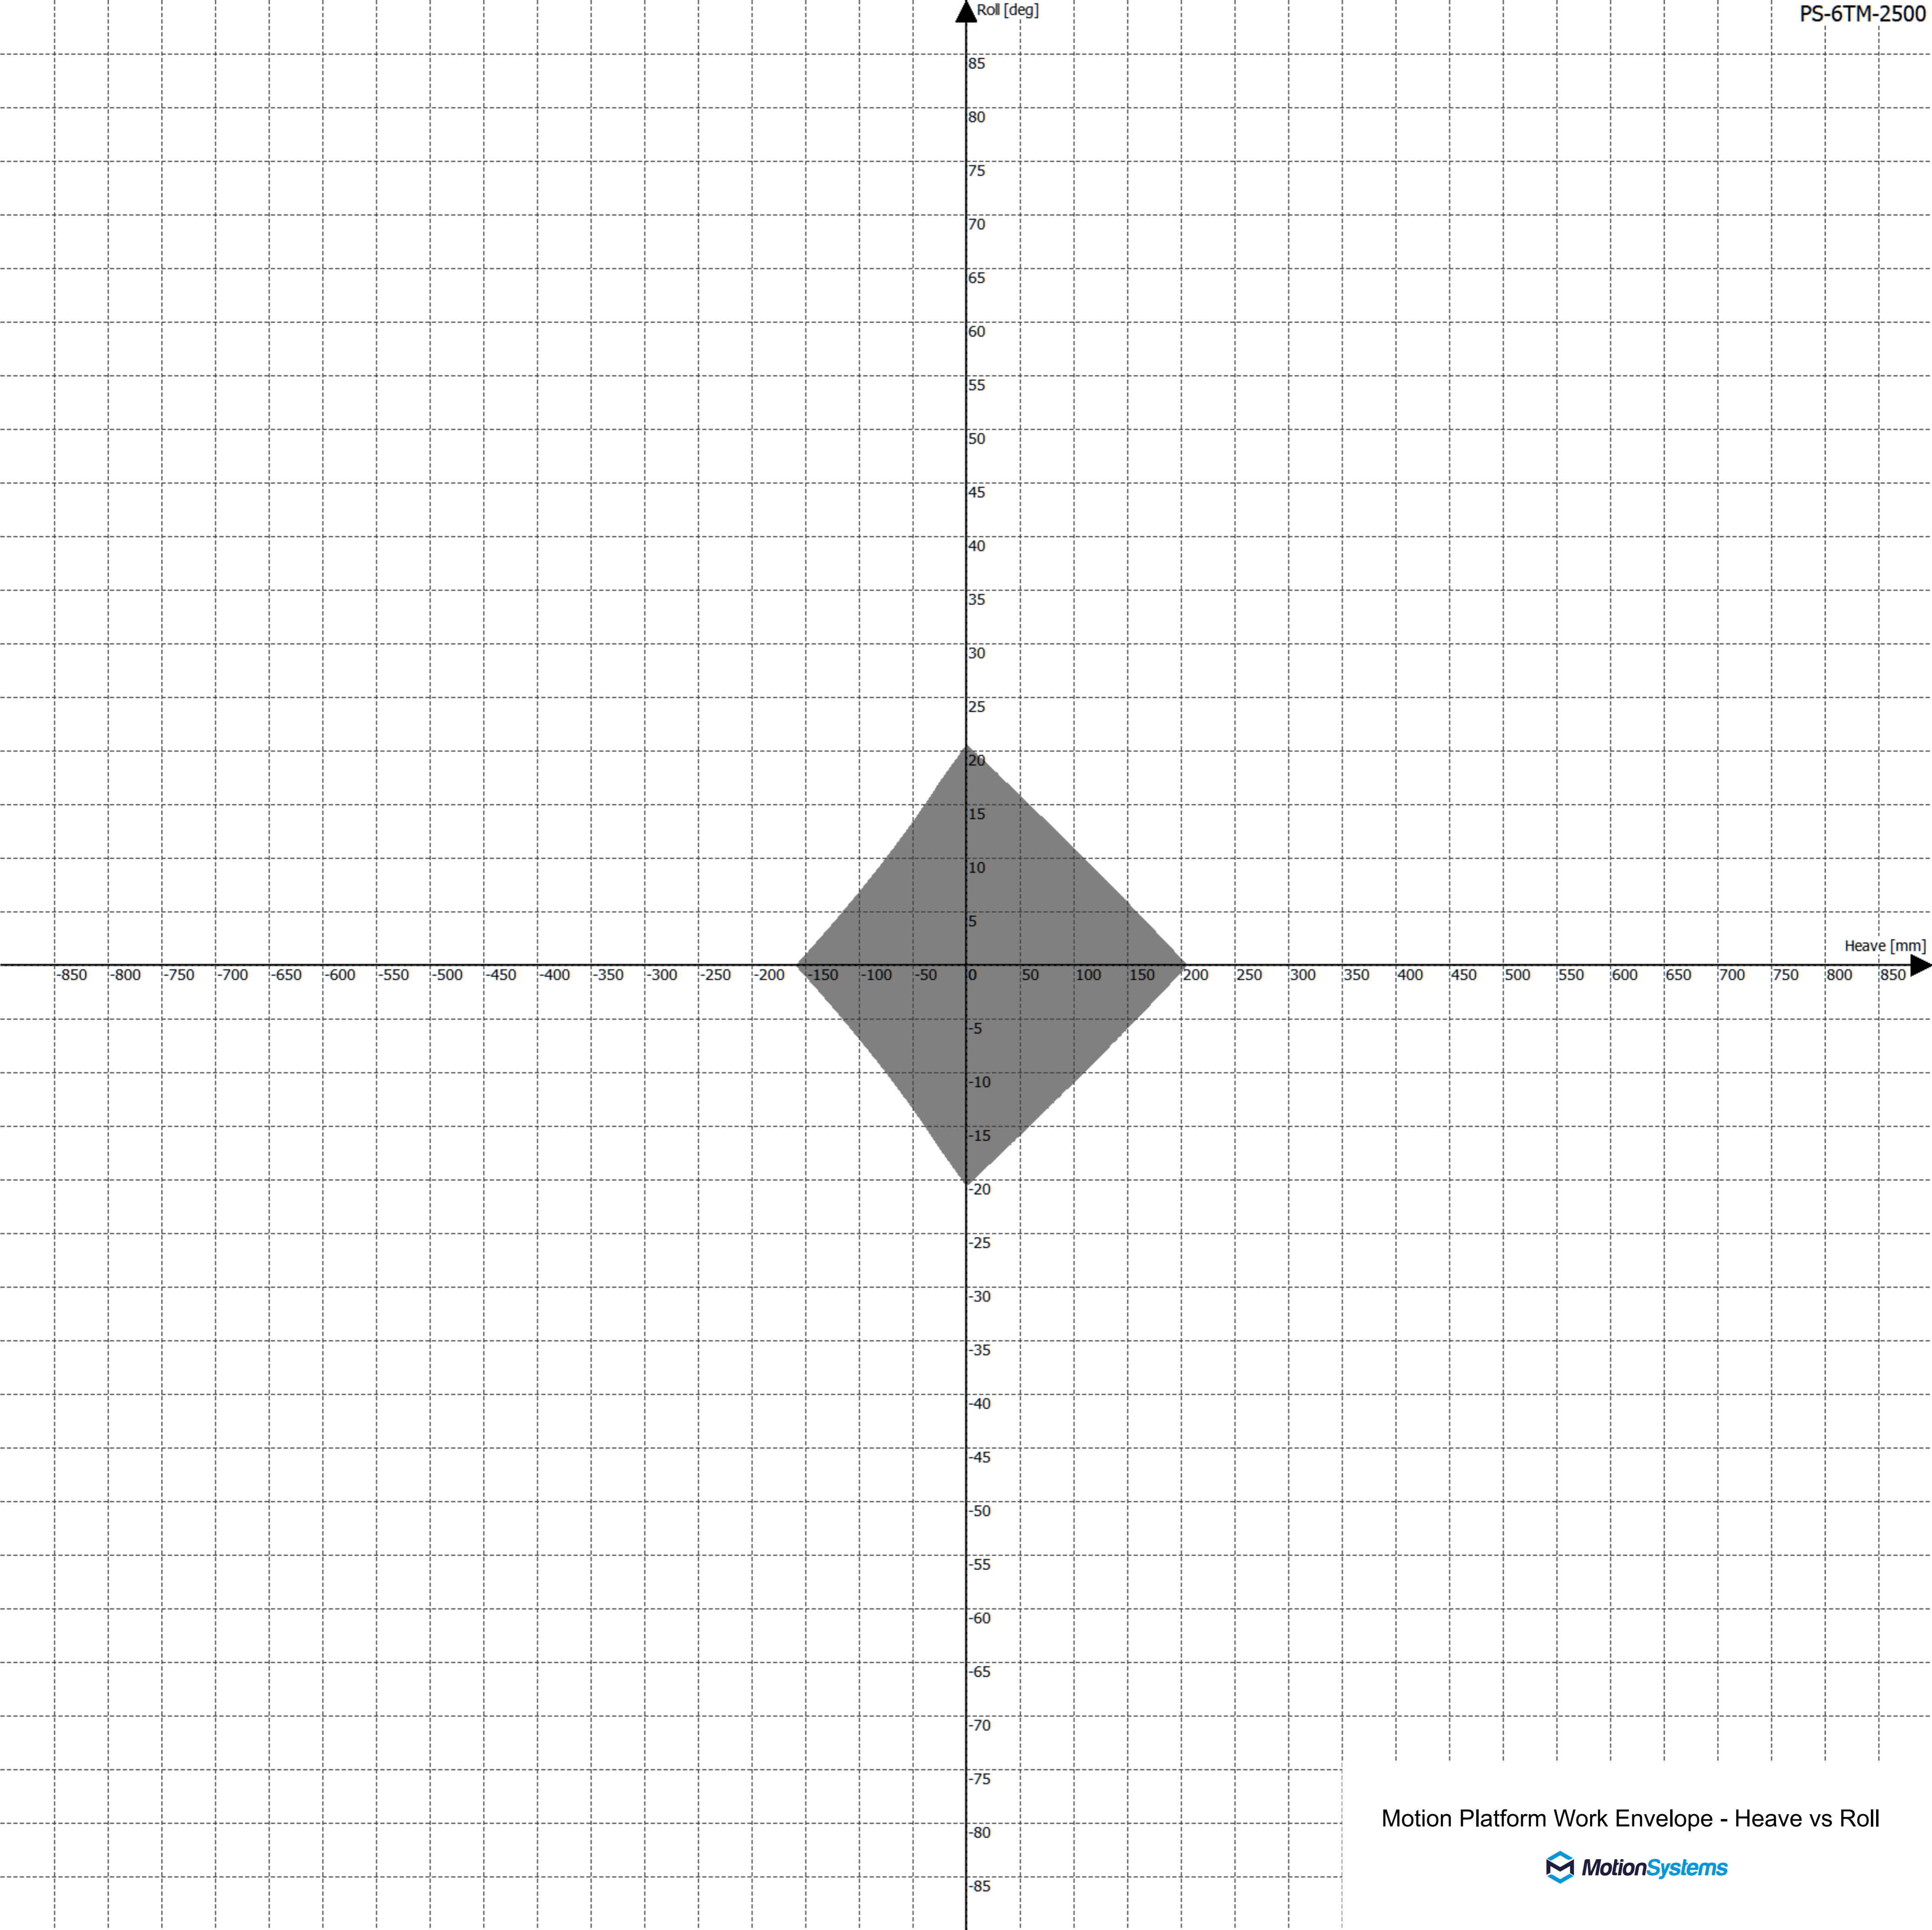

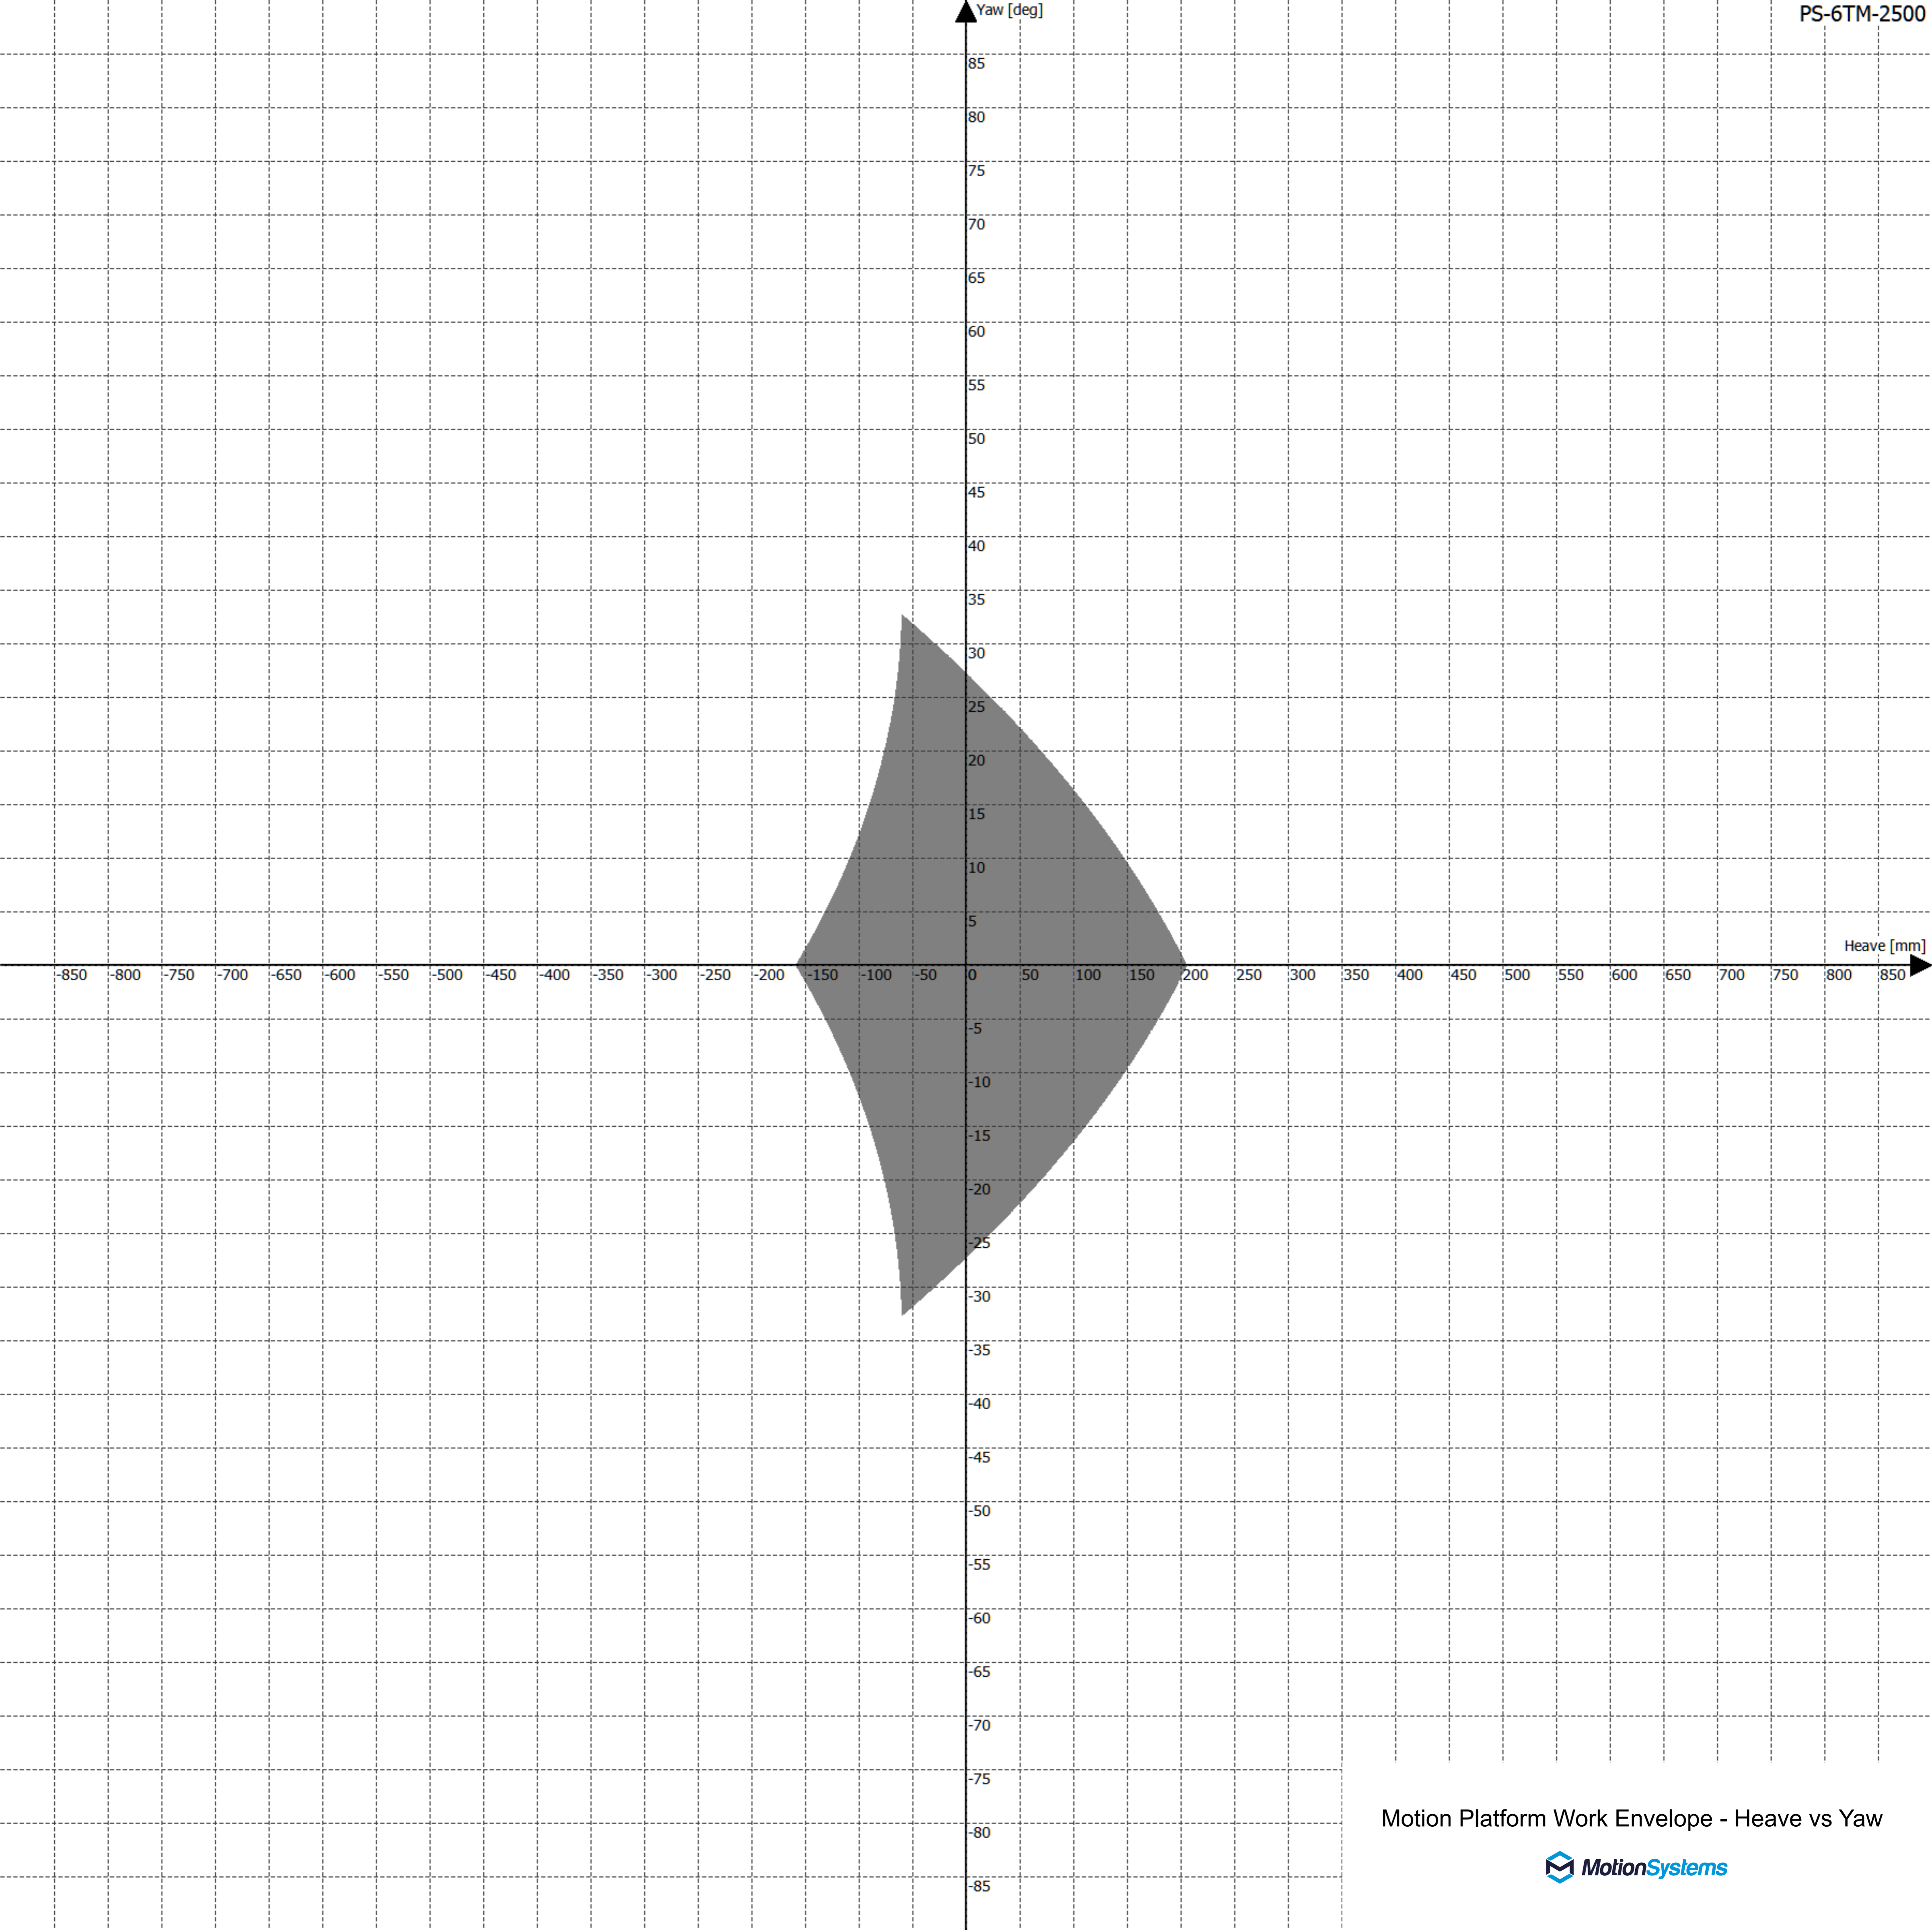


Motion Platform Work Envelope - Heave vs Yaw



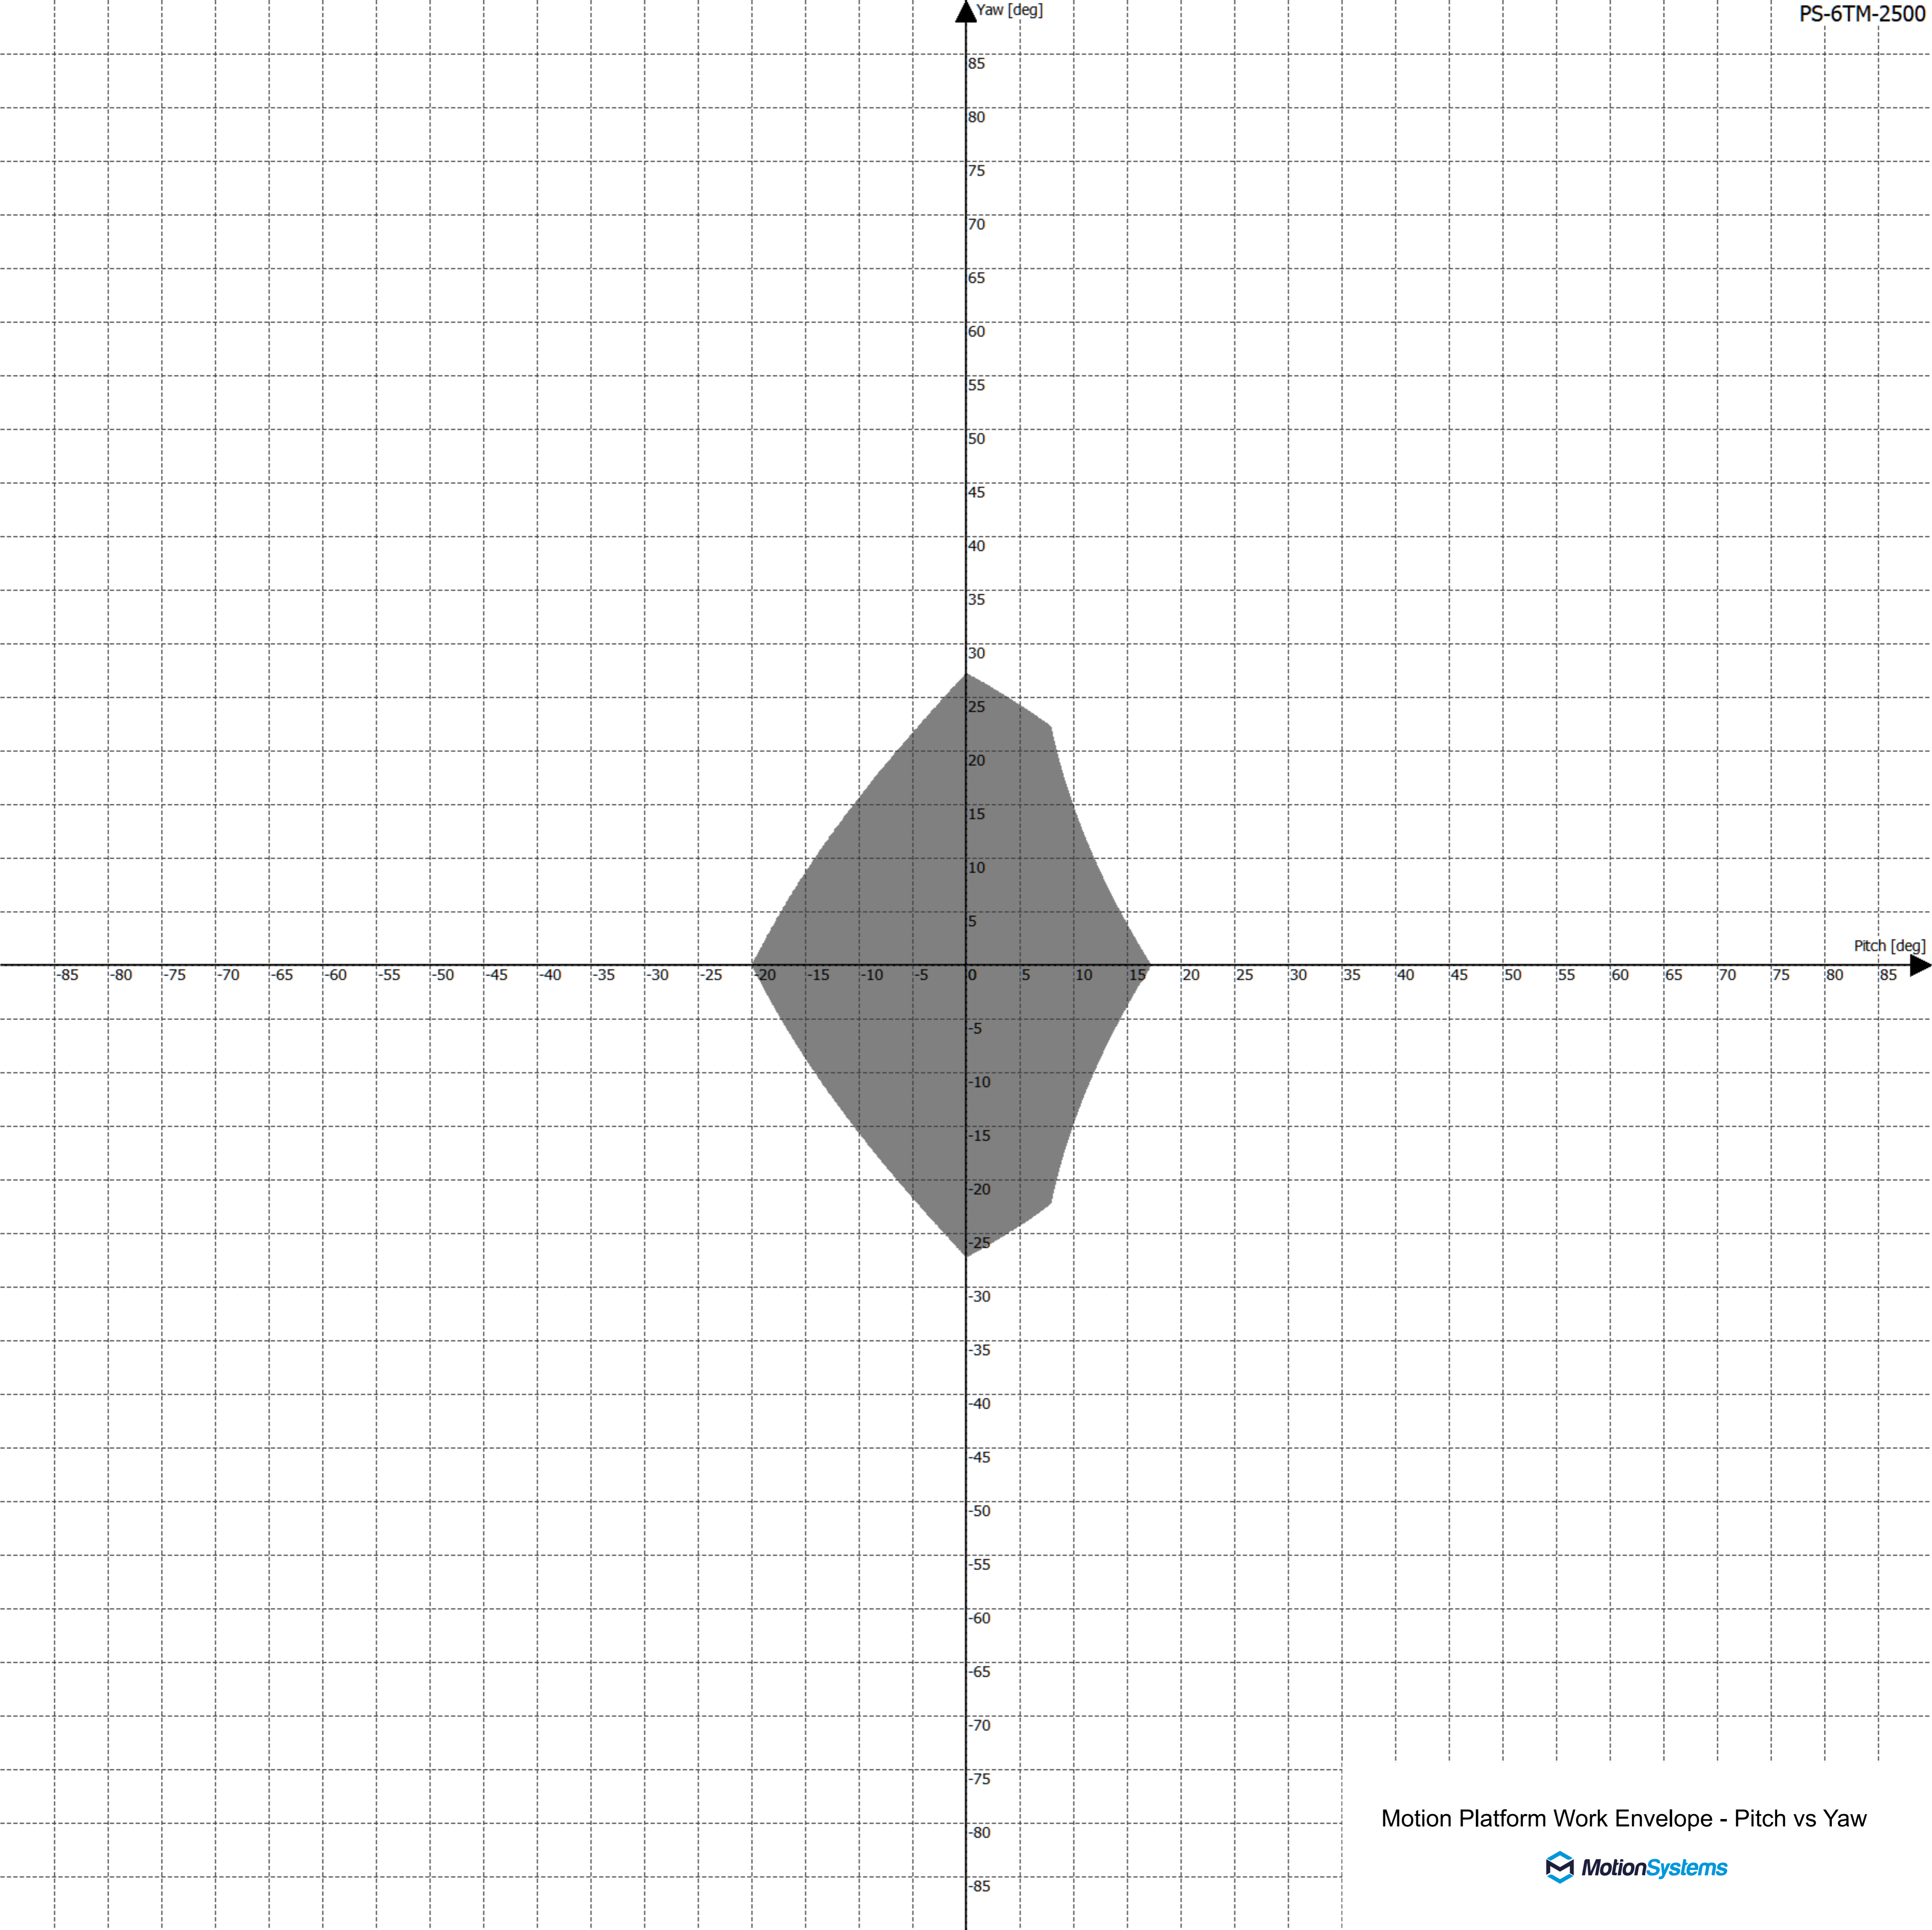


Motion Platform Work Envelope - Pitch vs Yaw



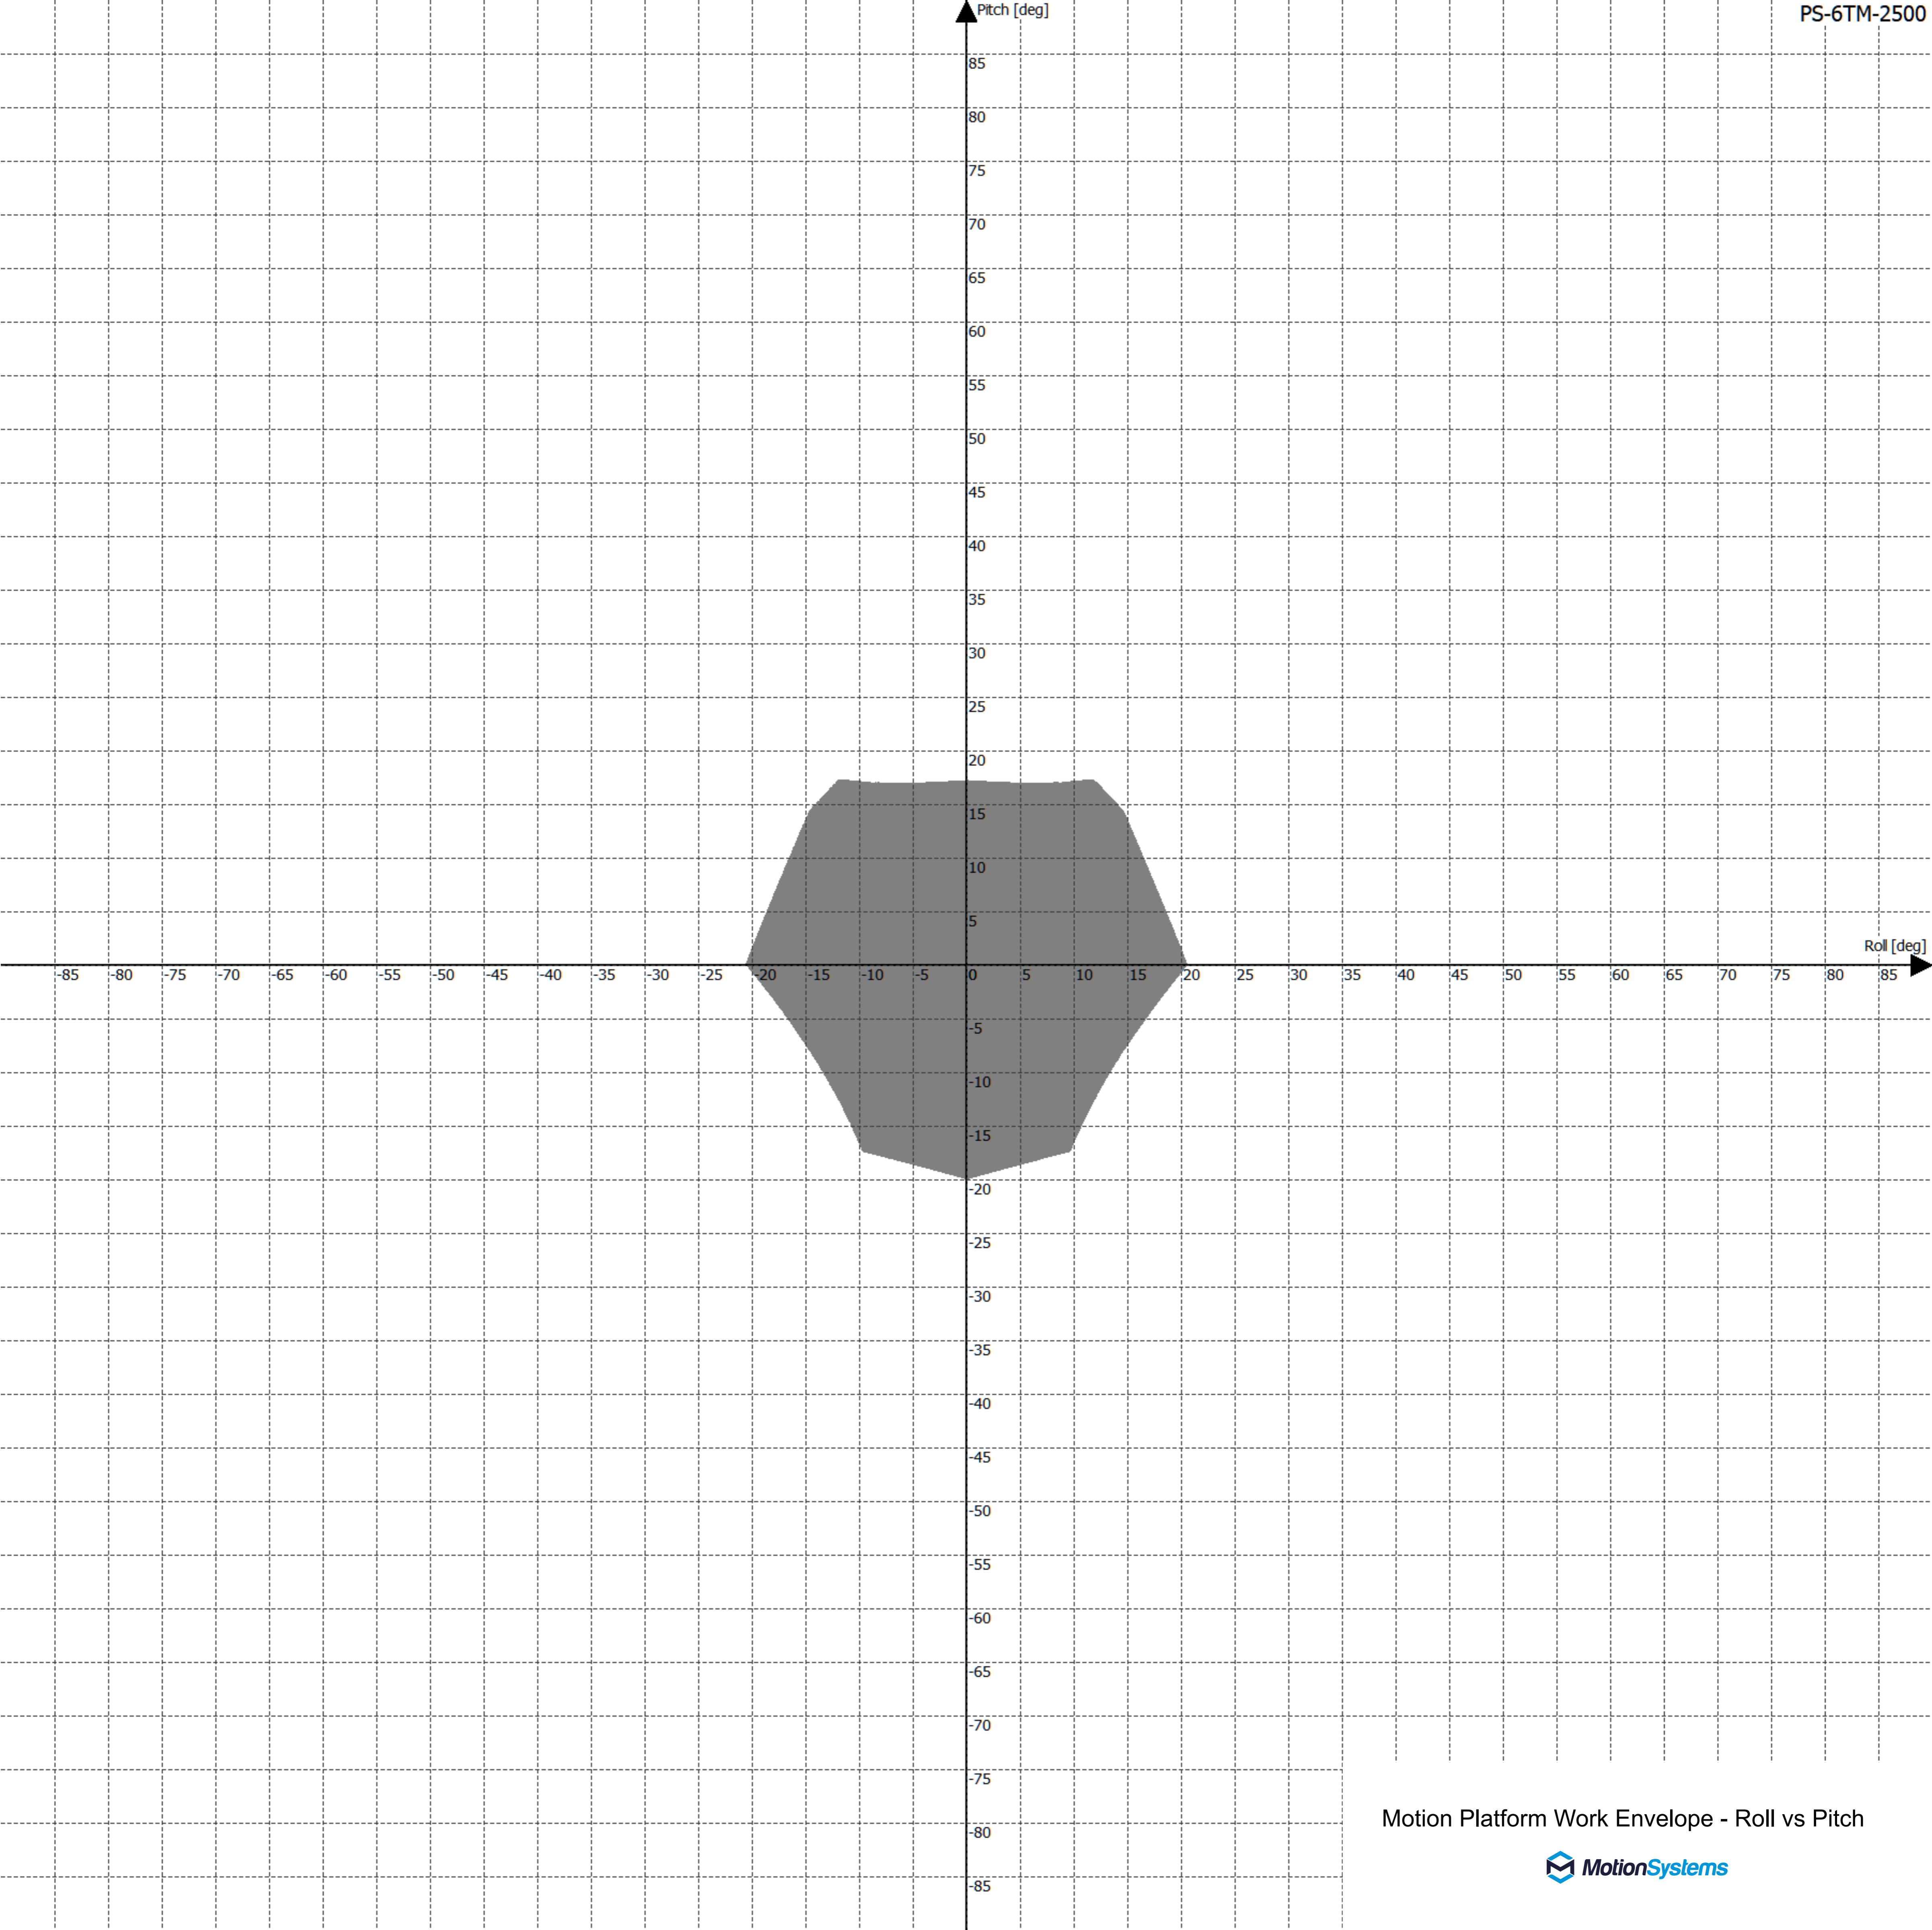


Motion Platform Work Envelope - Roll vs Pitch



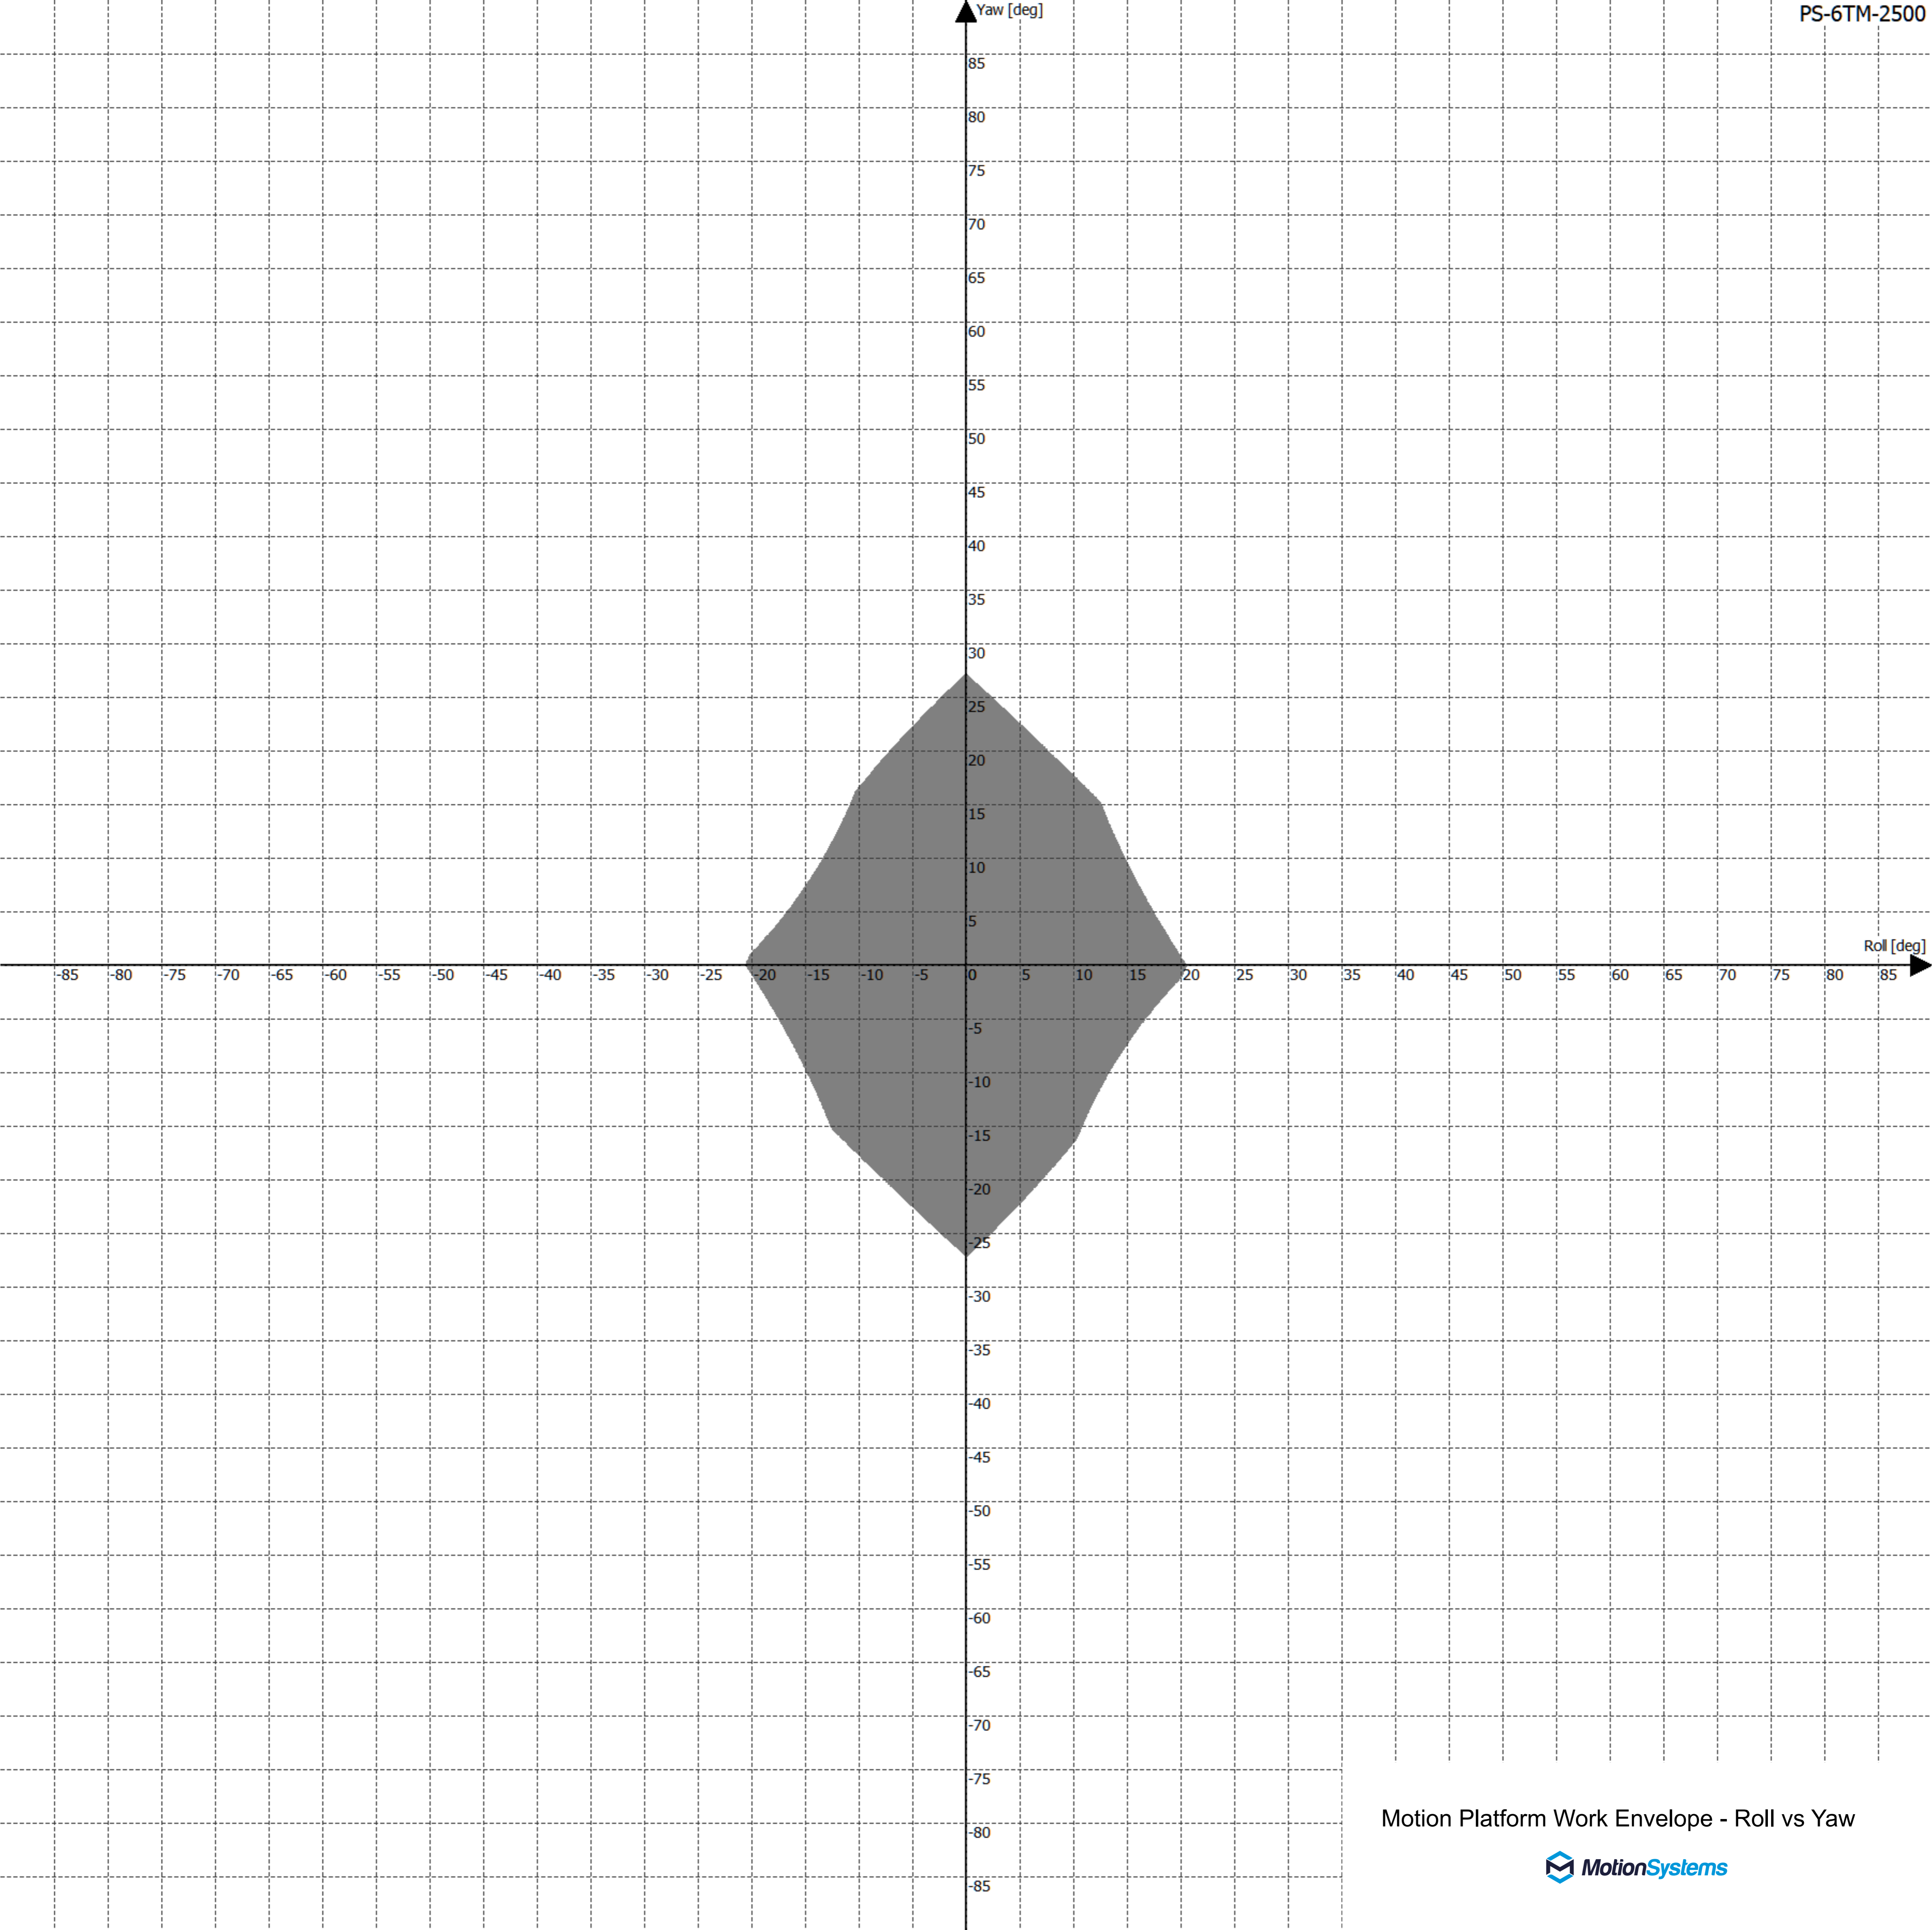


Motion Platform Work Envelope - Roll vs Yaw



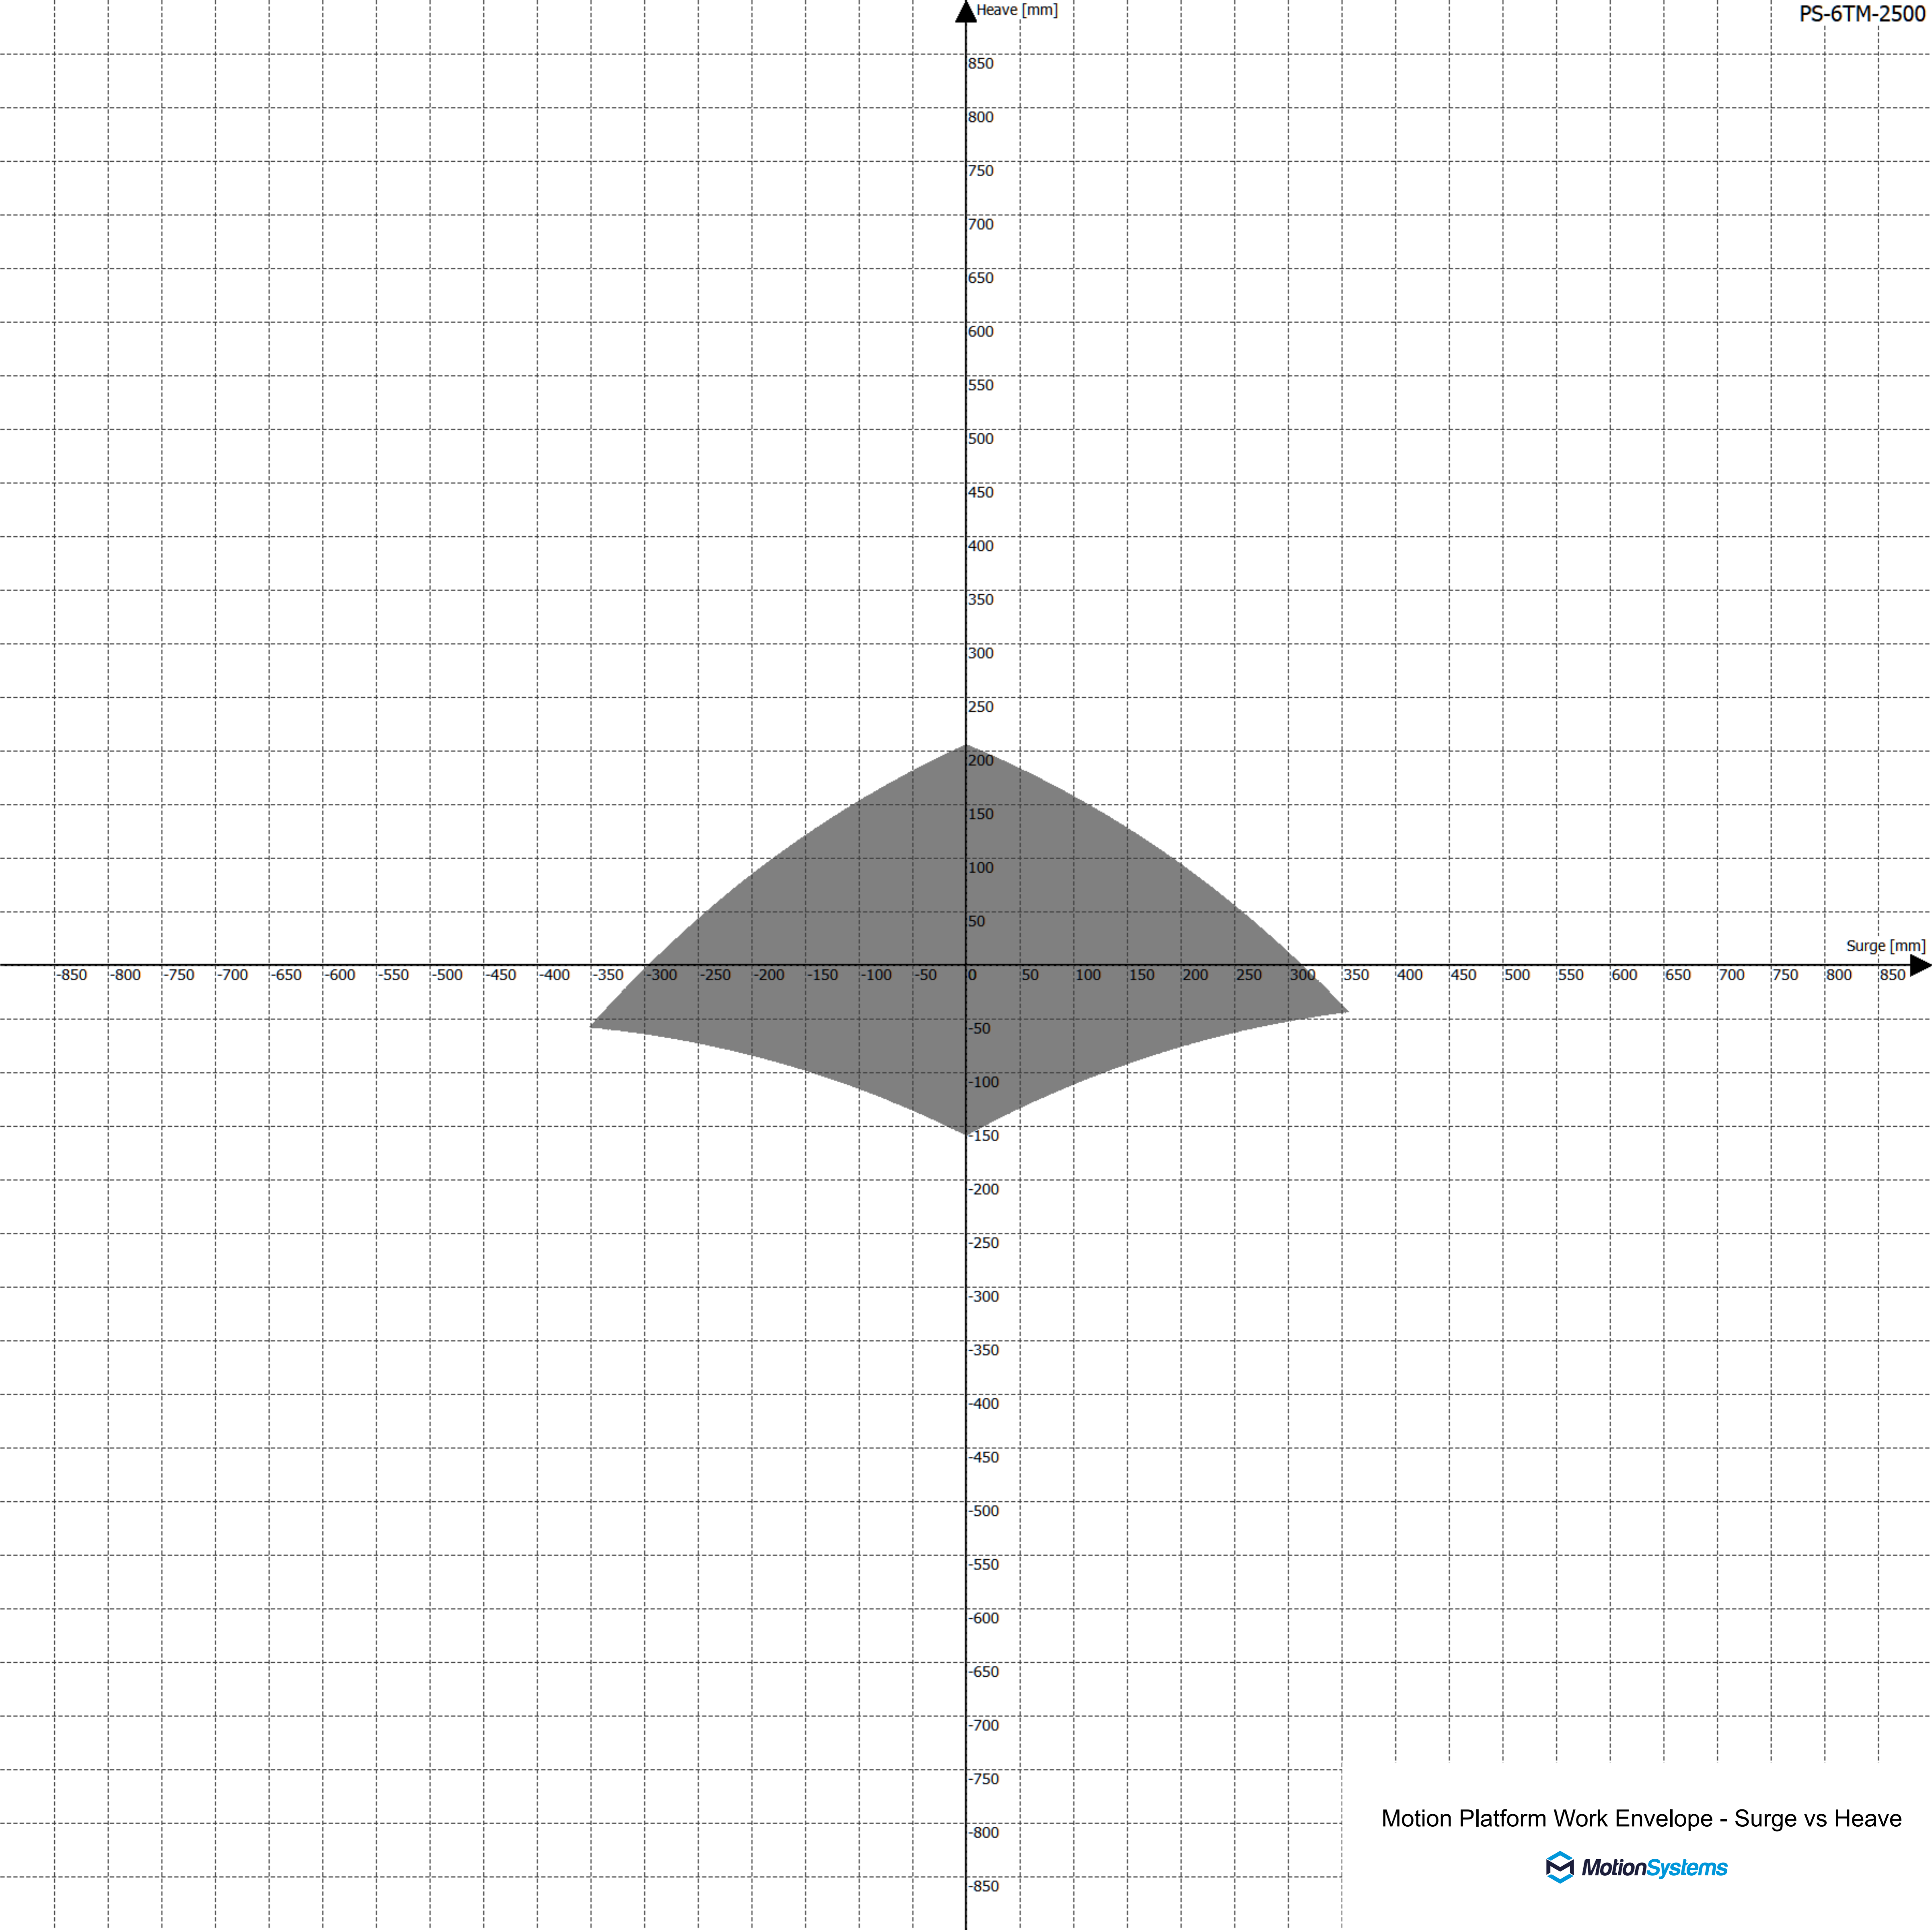

Motion Platform Work Envelope - Surge vs Heave




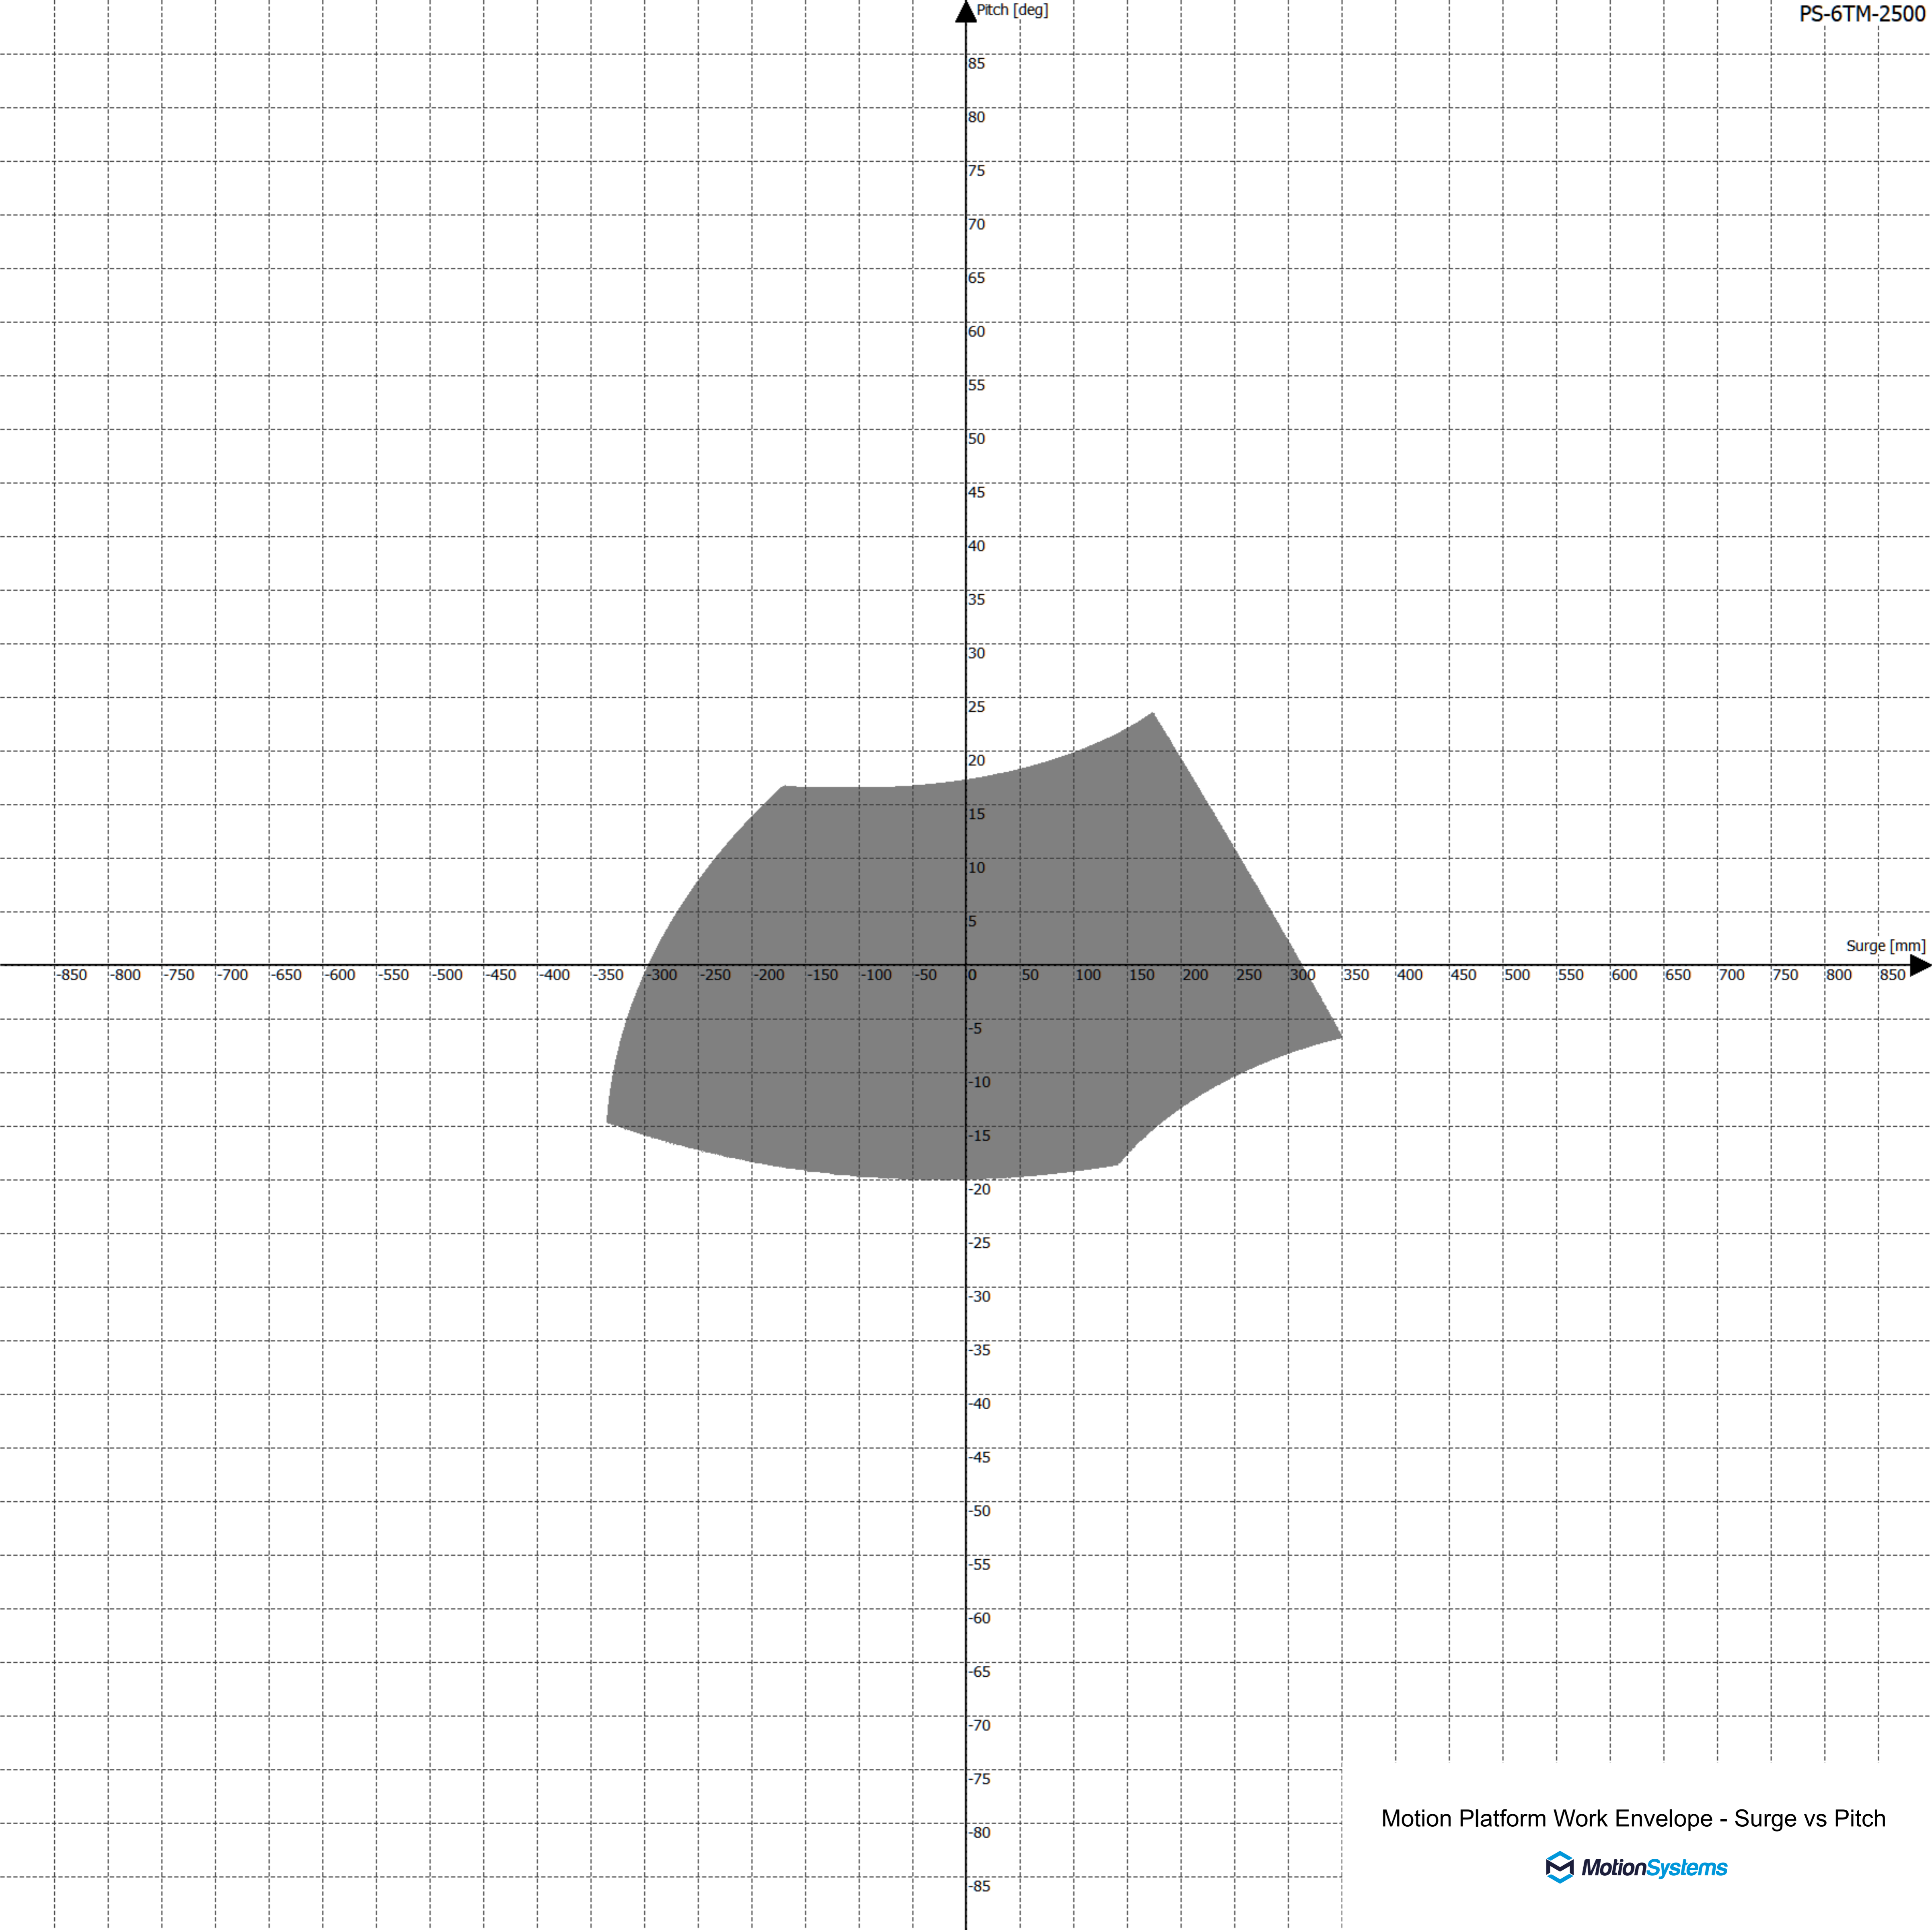


Motion Platform Work Envelope - Surge vs Pitch






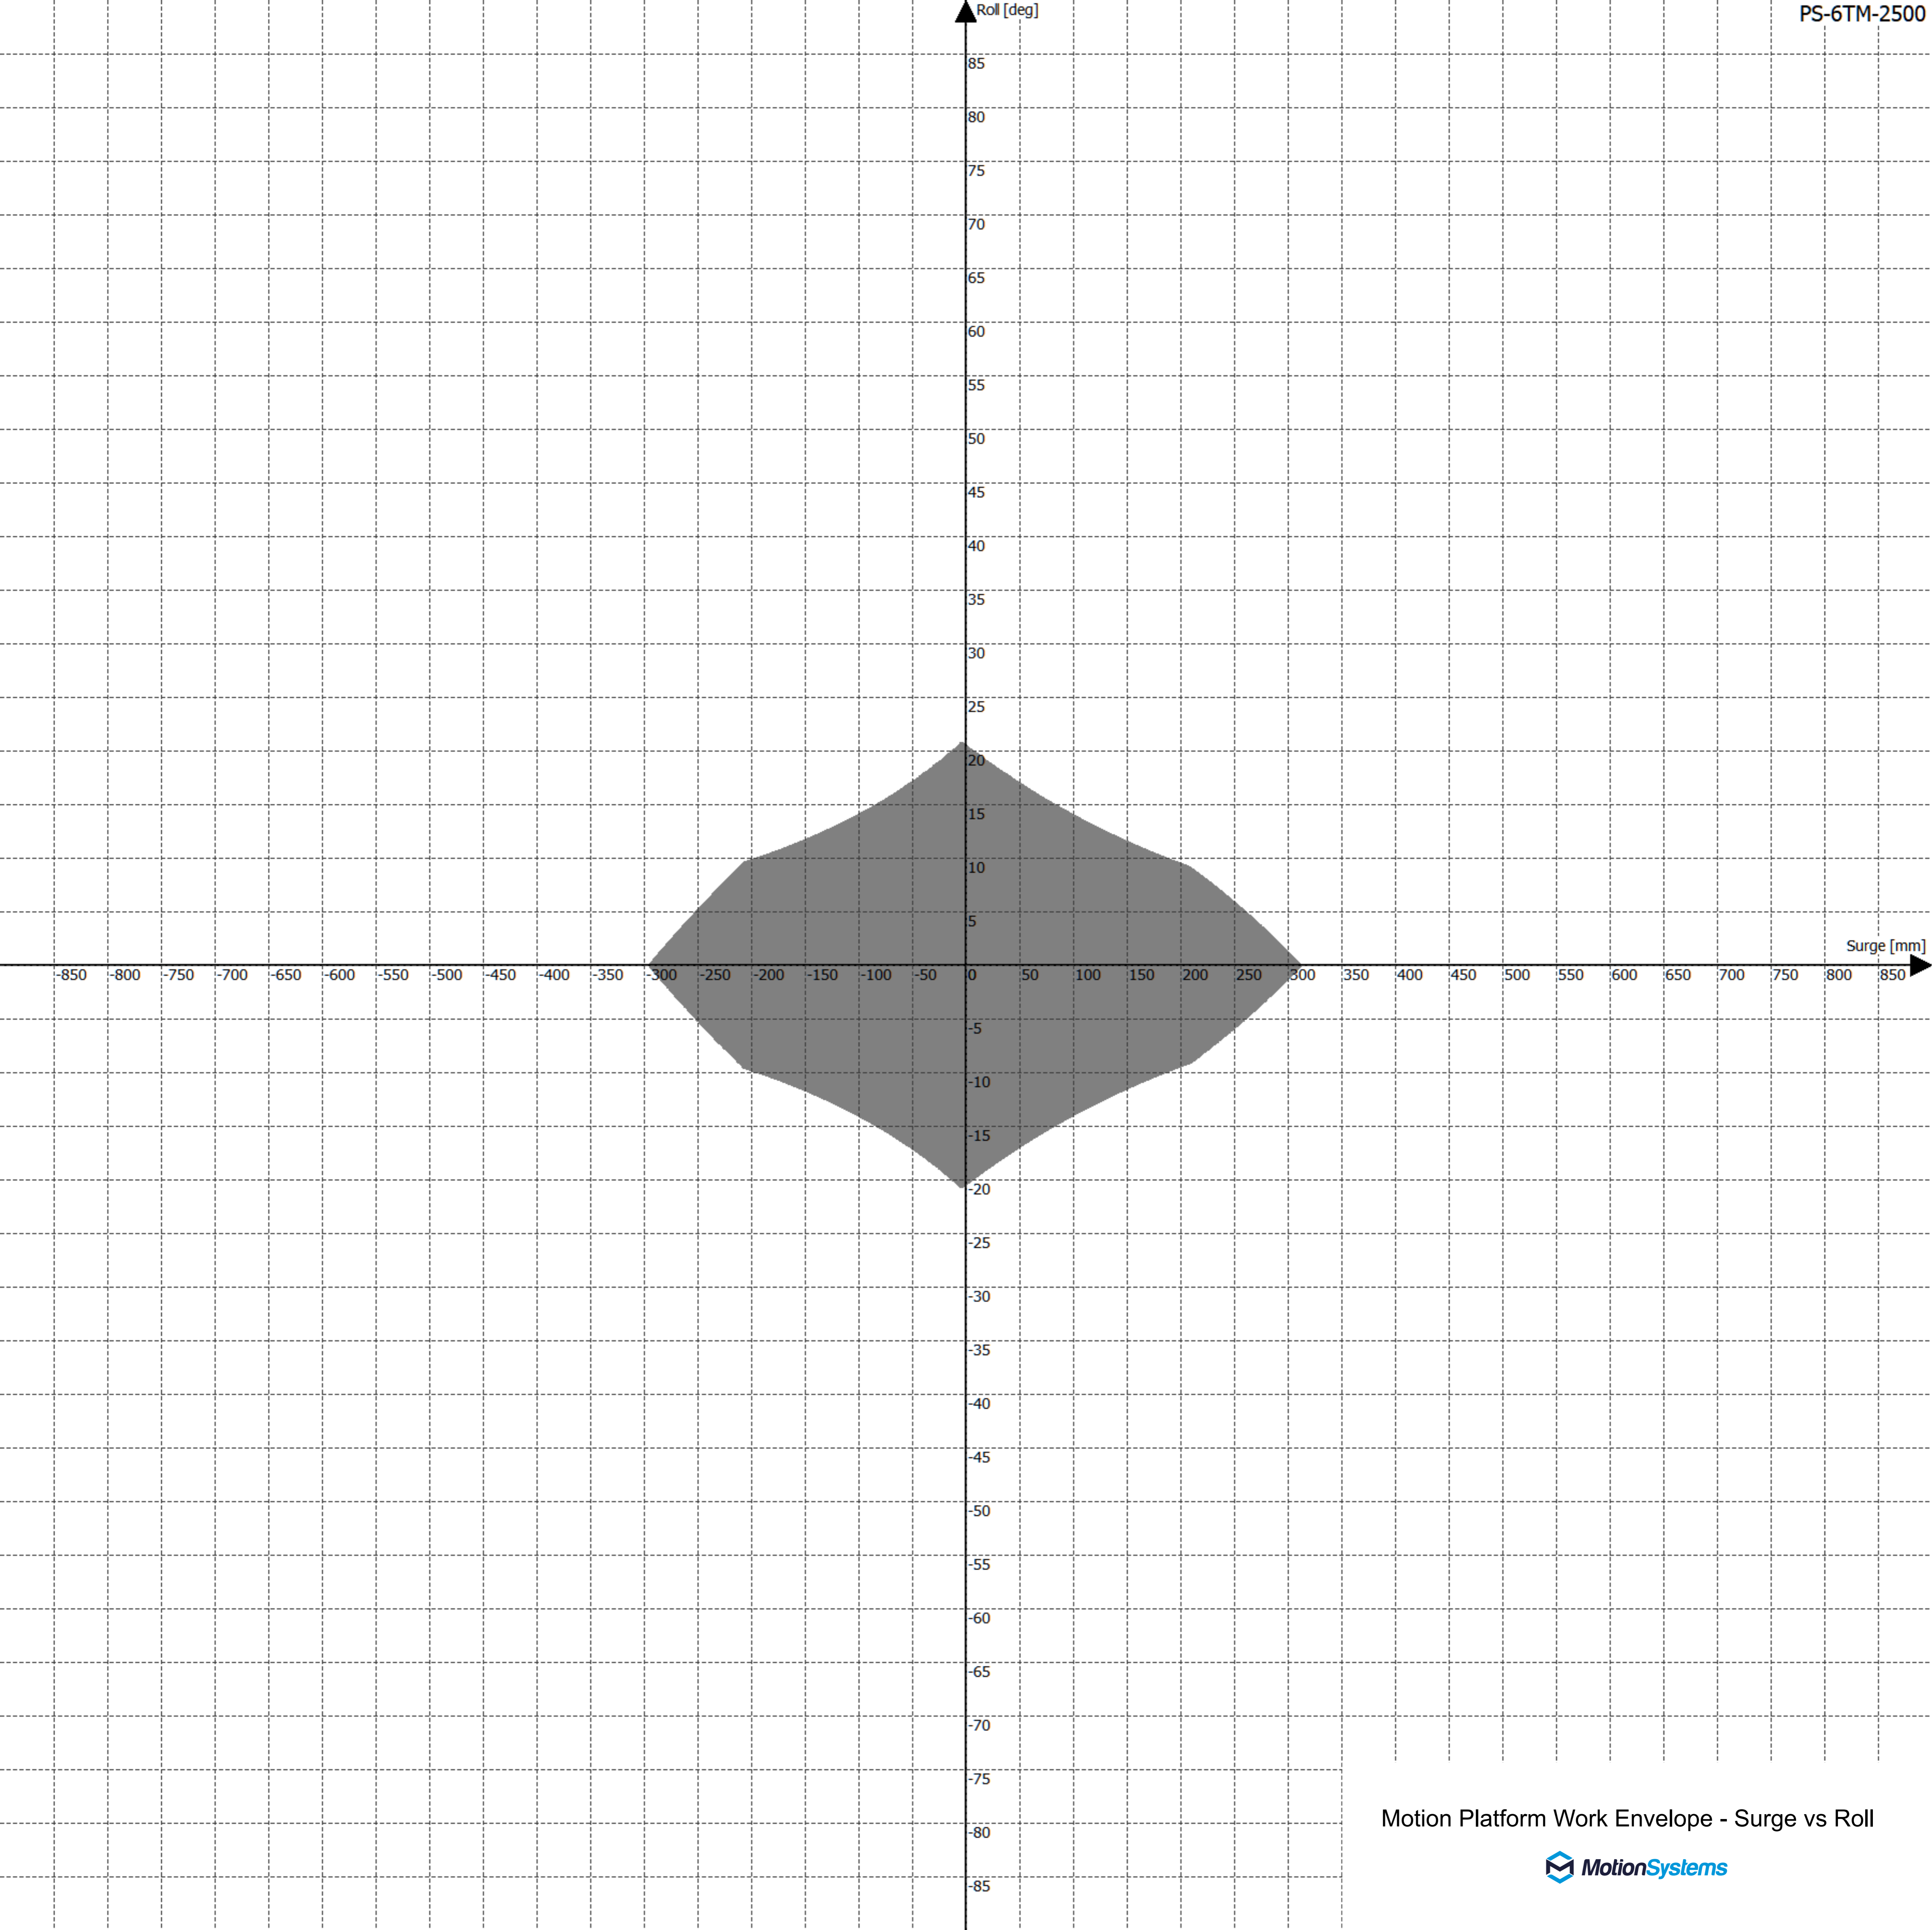

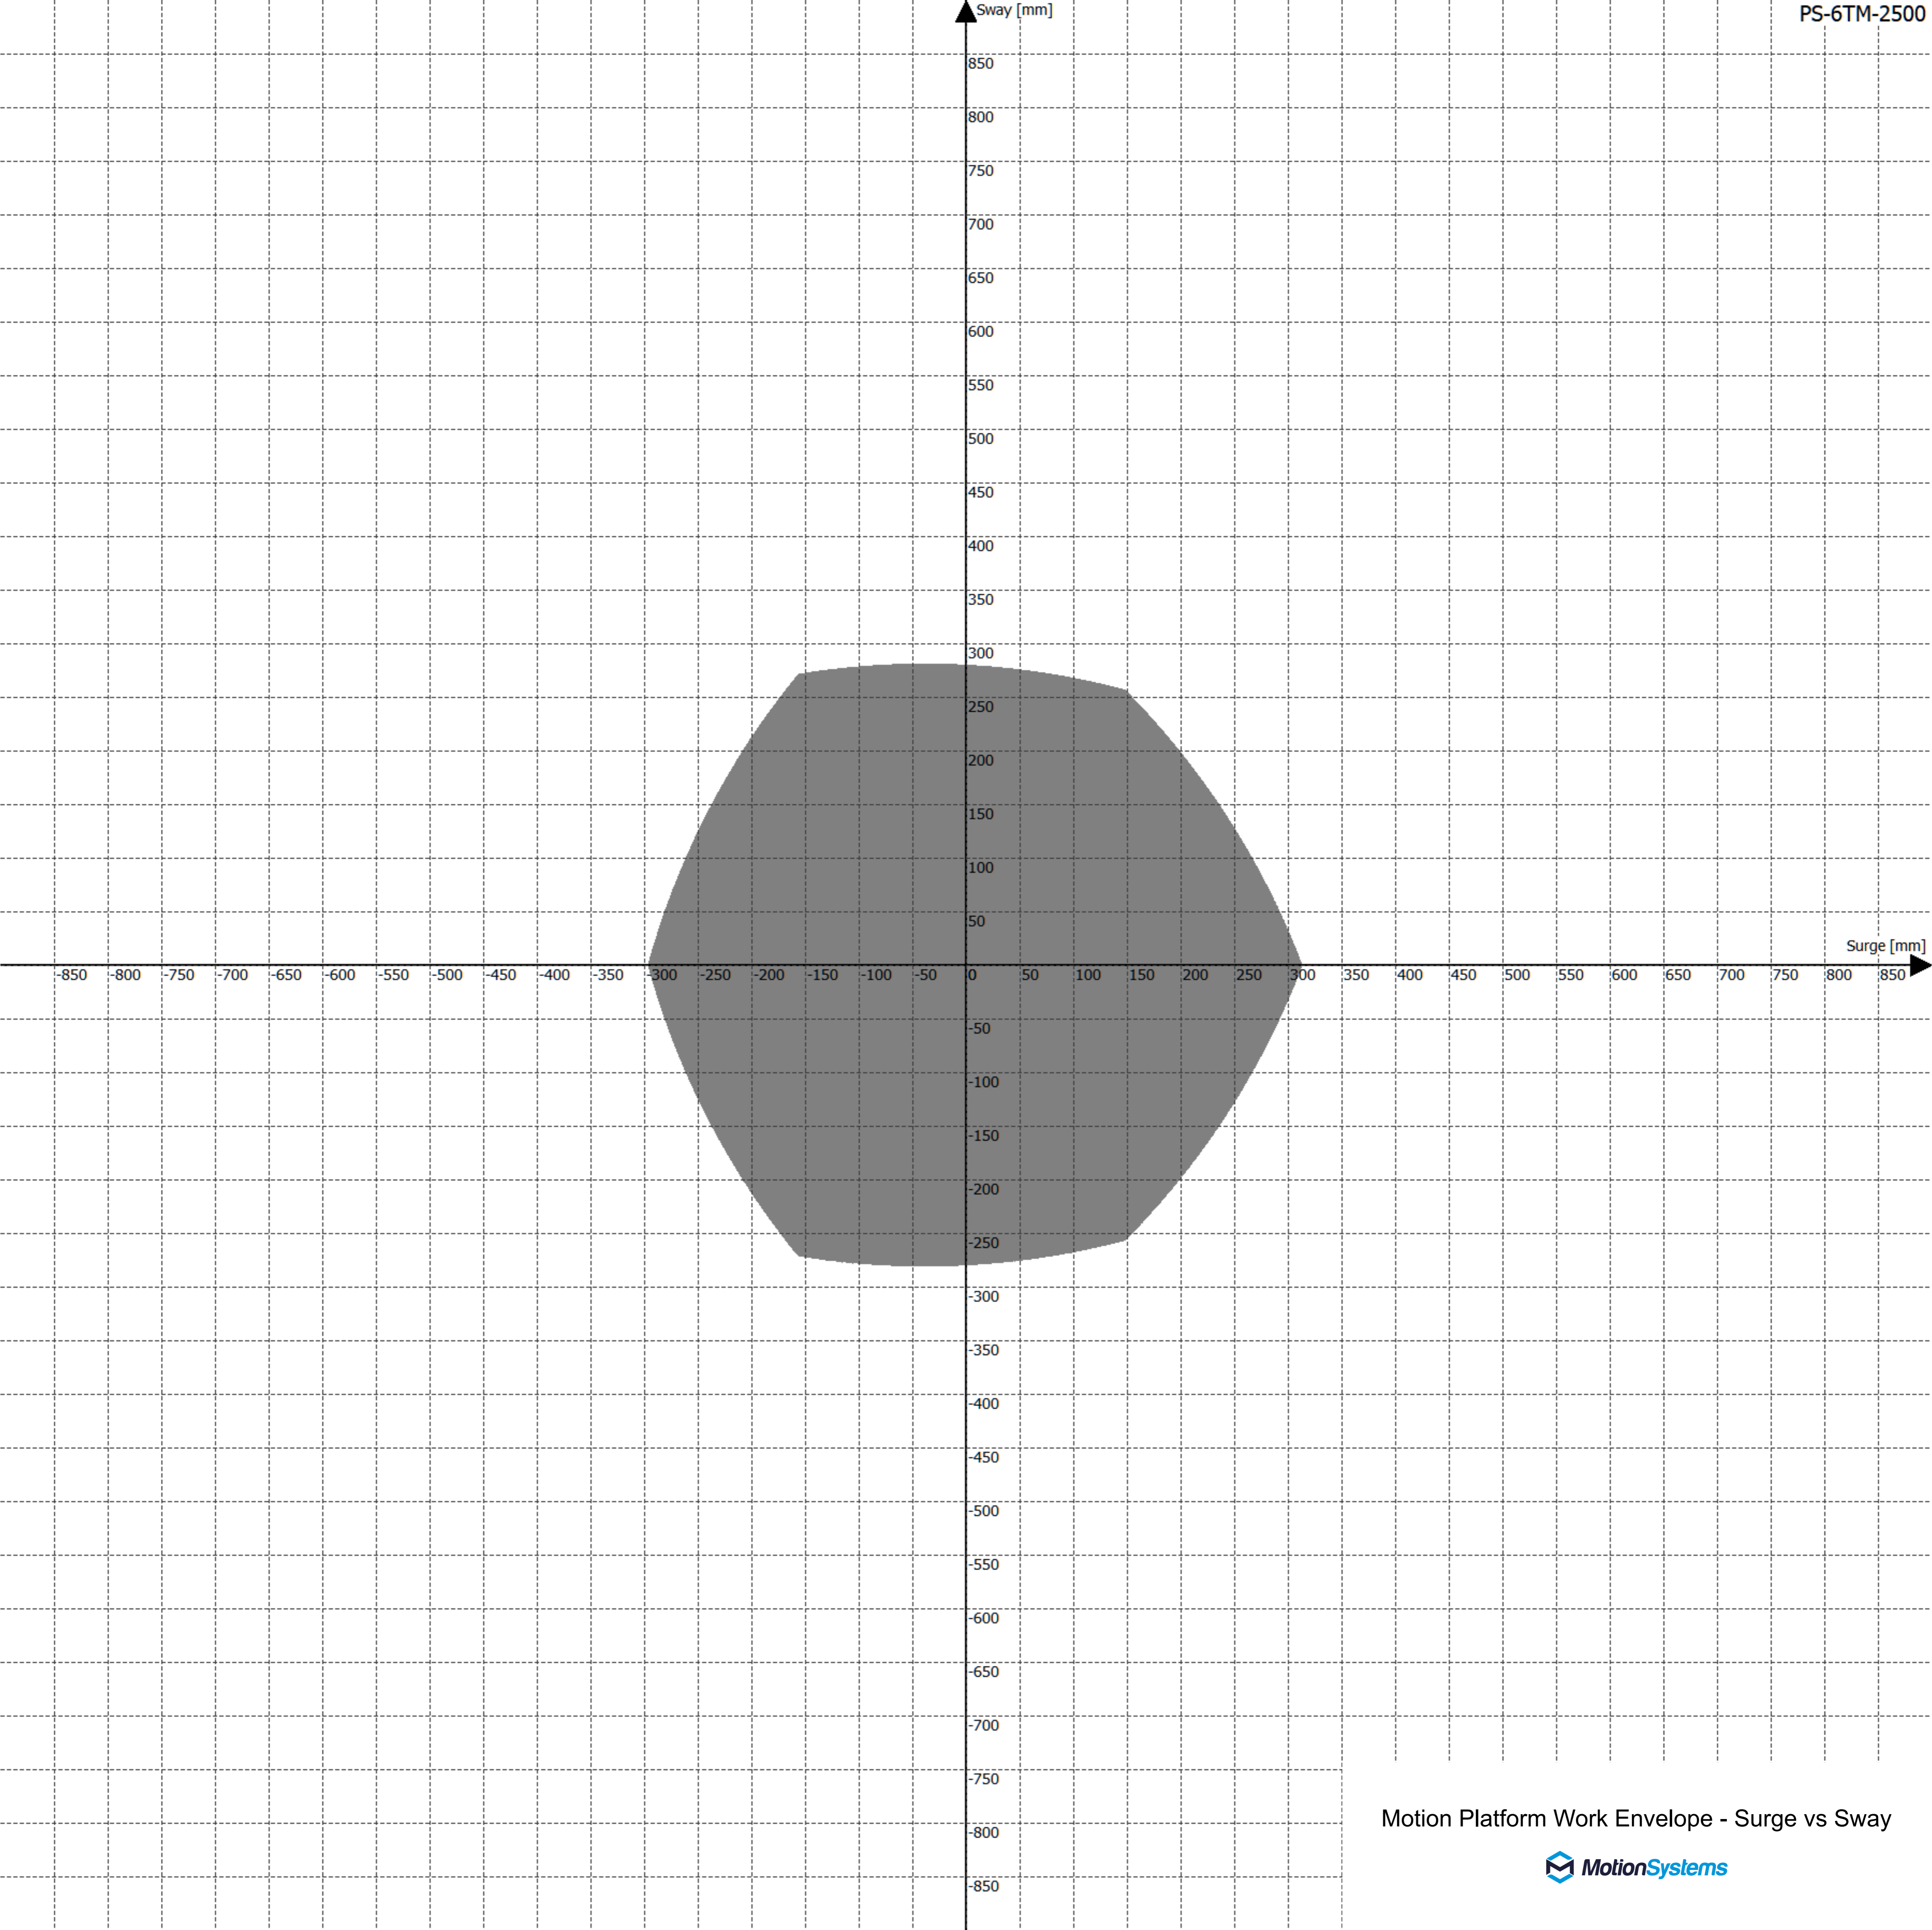


Motion Platform Work Envelope - Surge vs Sway



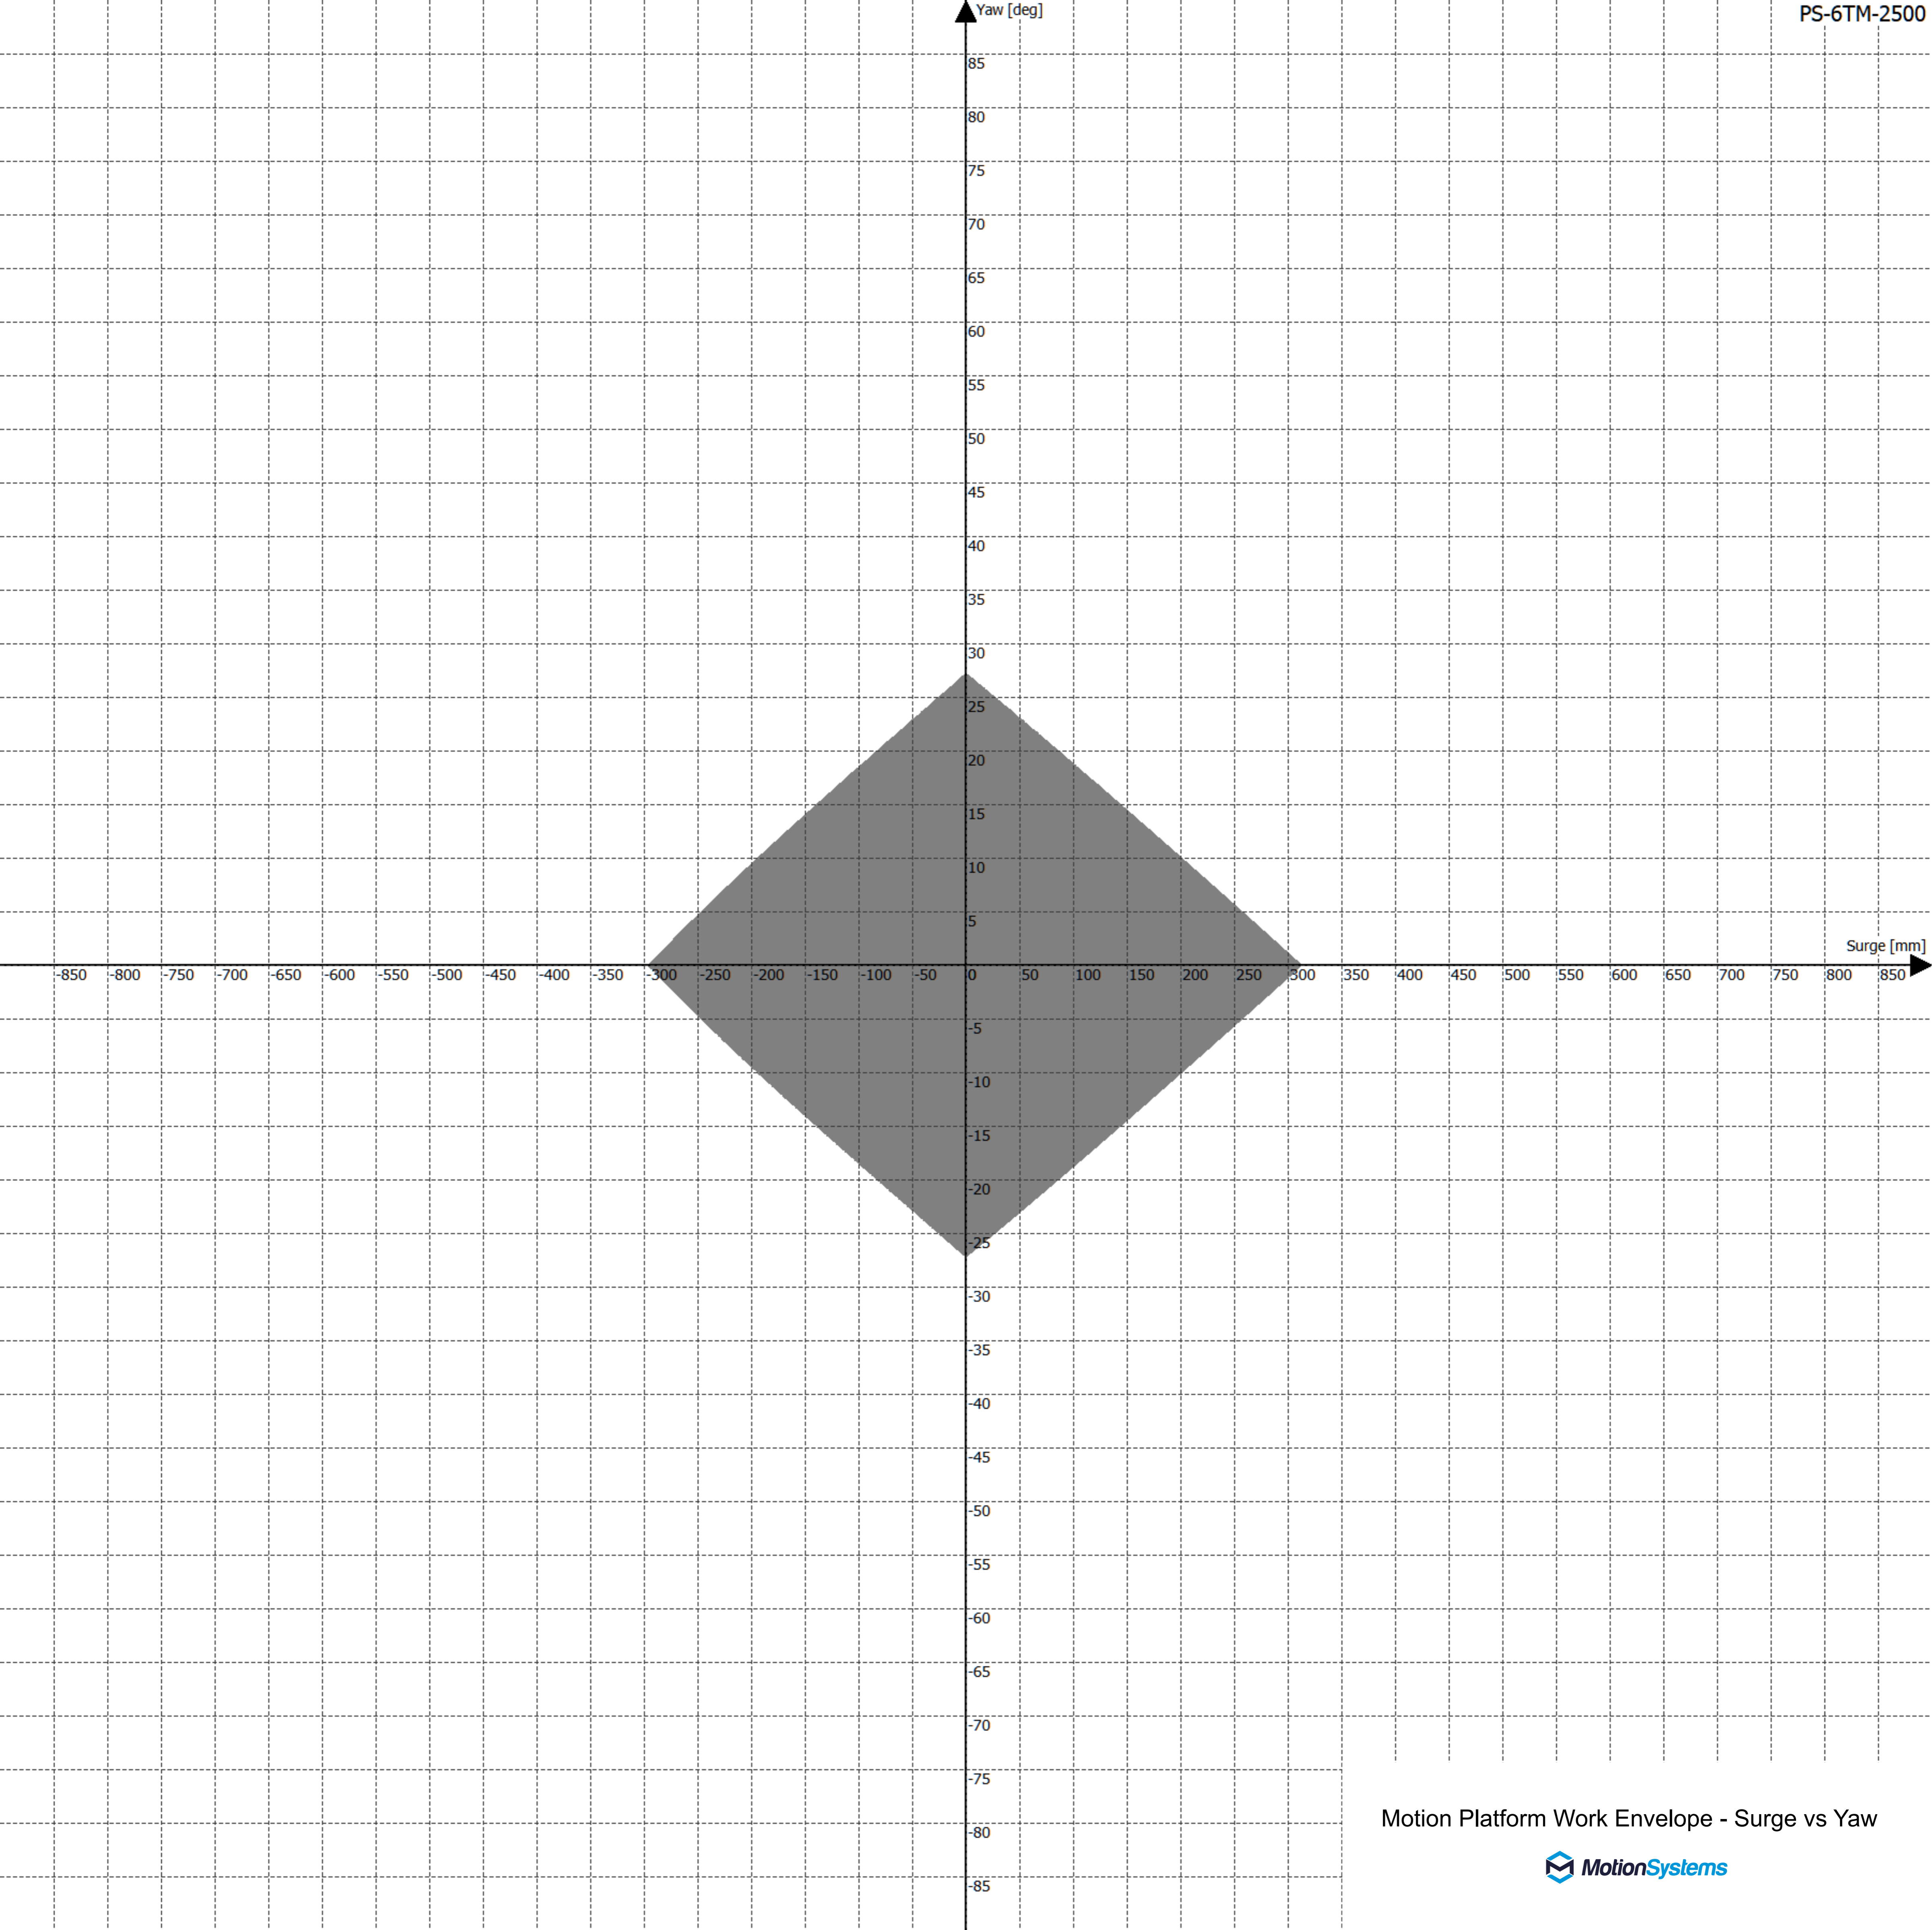


Motion Platform Work Envelope - Surge vs Yaw



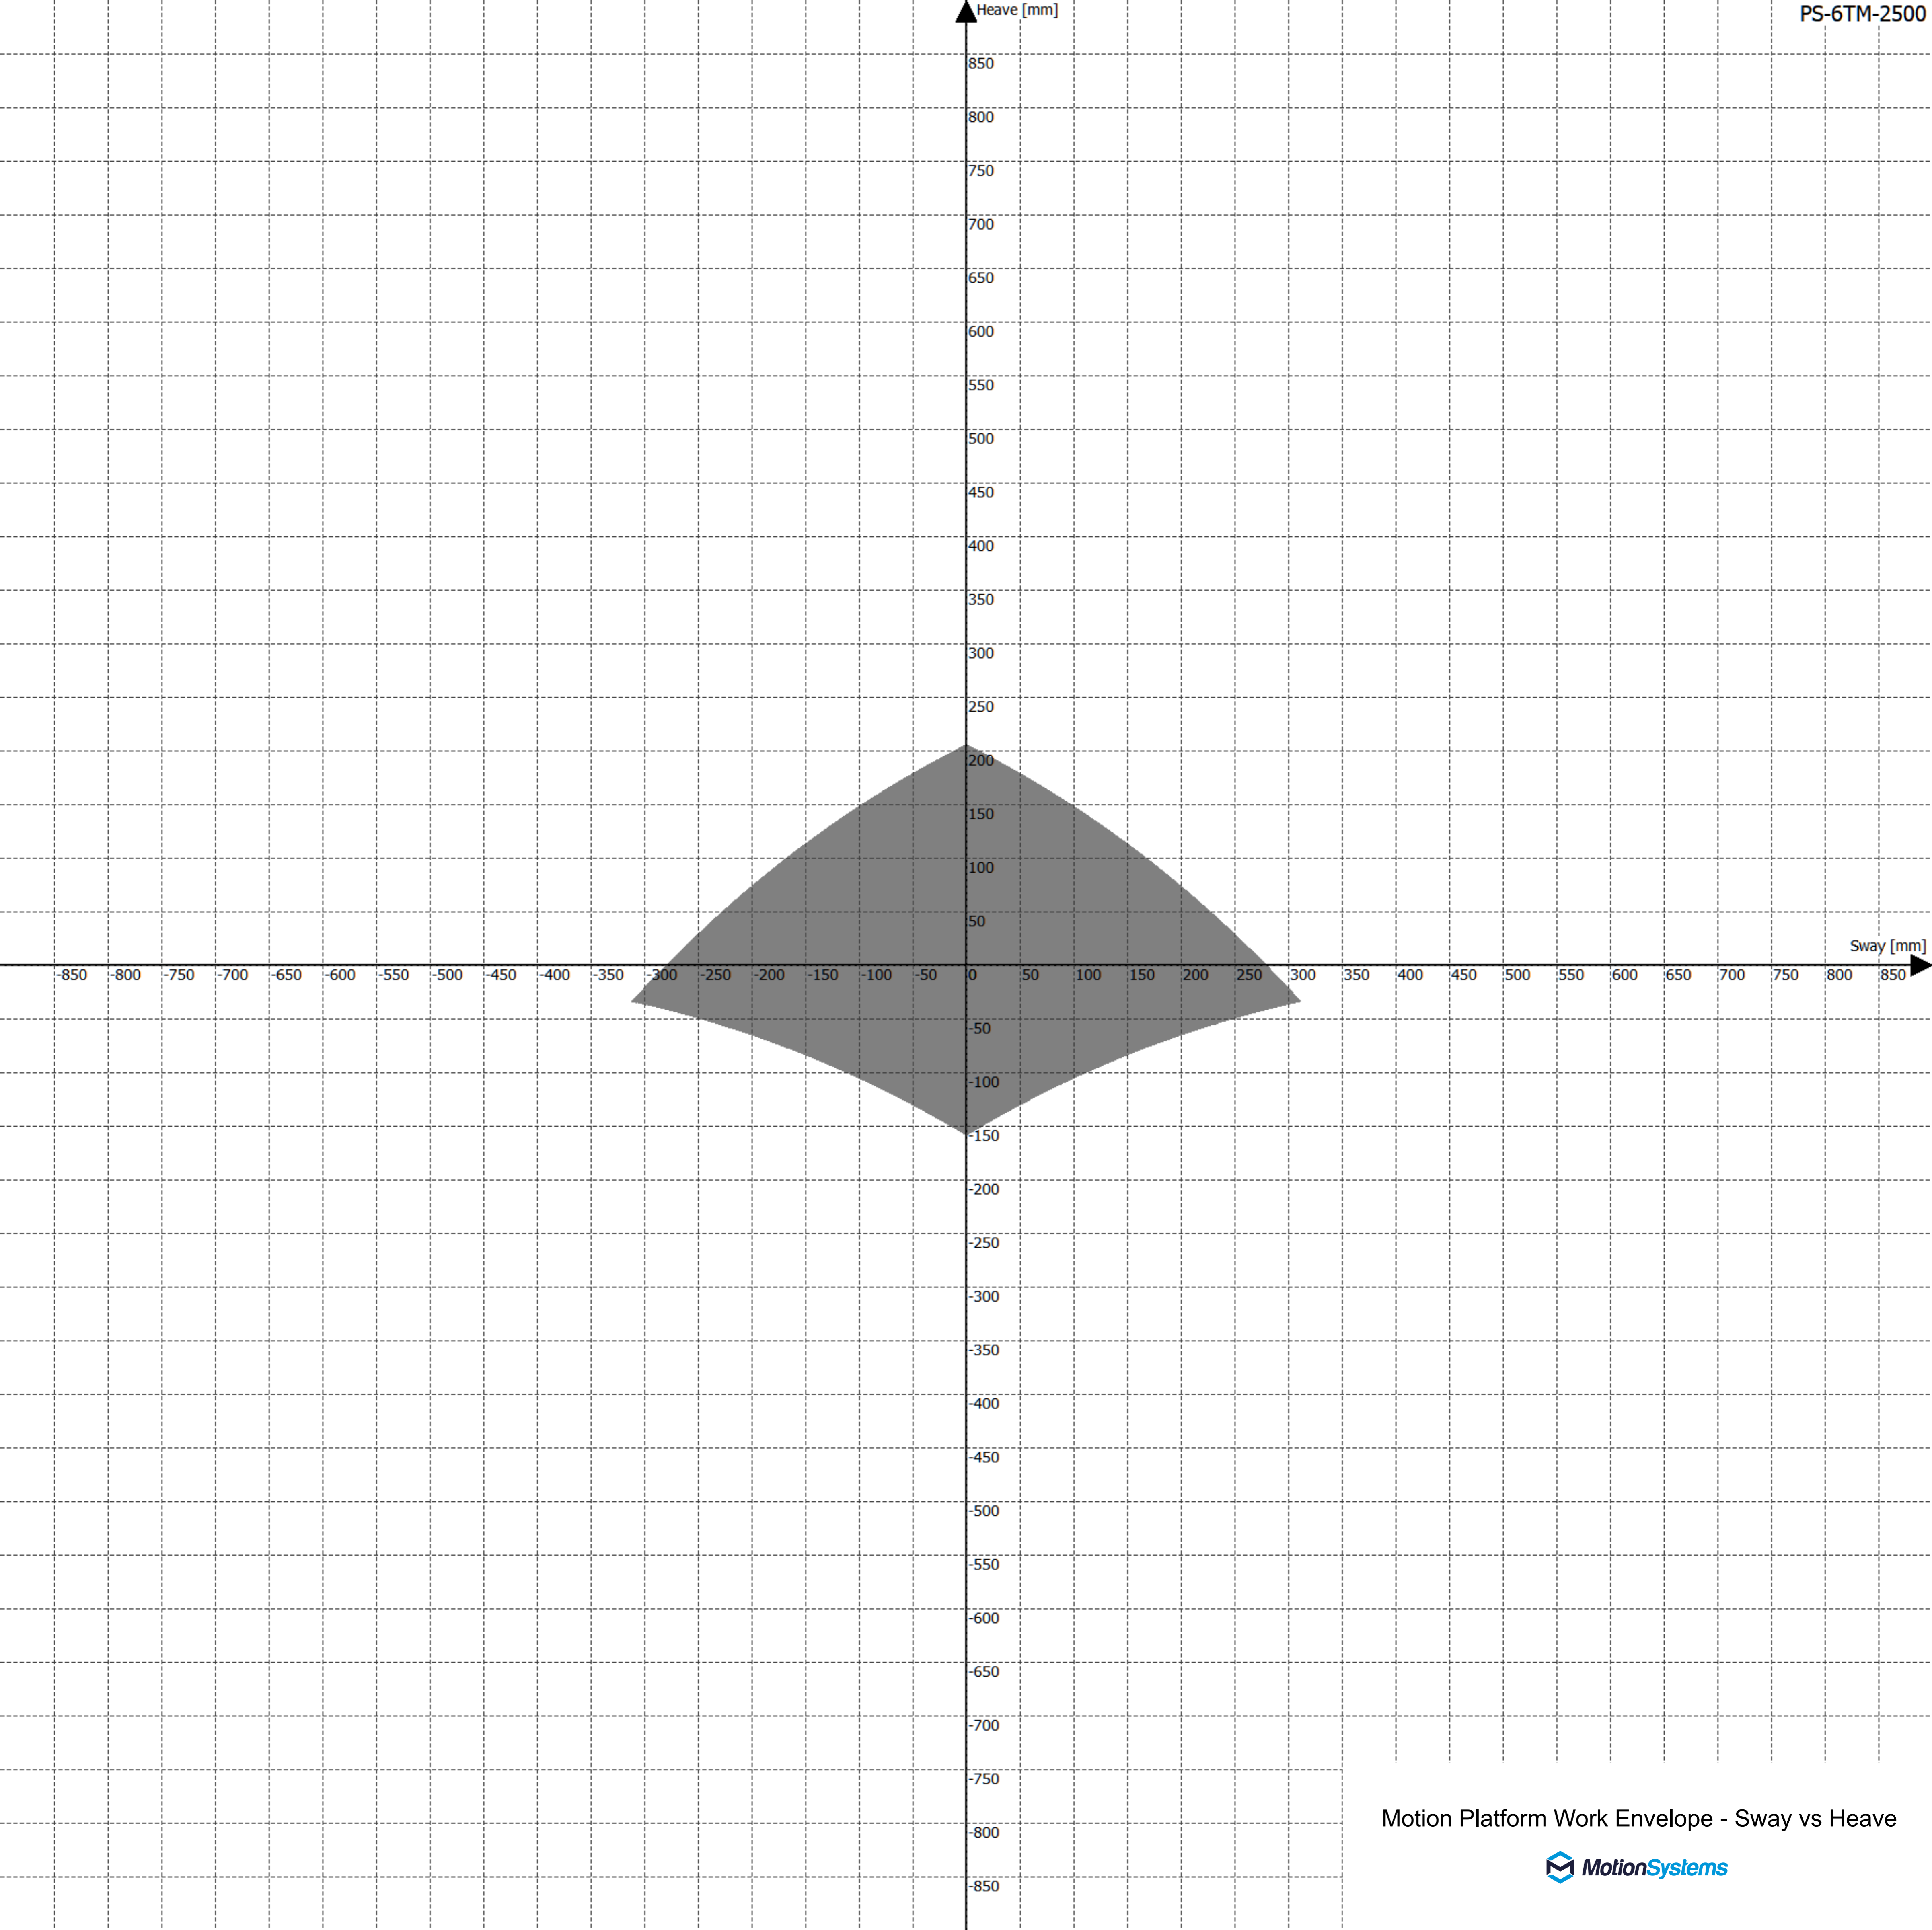


Motion Platform Work Envelope - Sway vs Heave




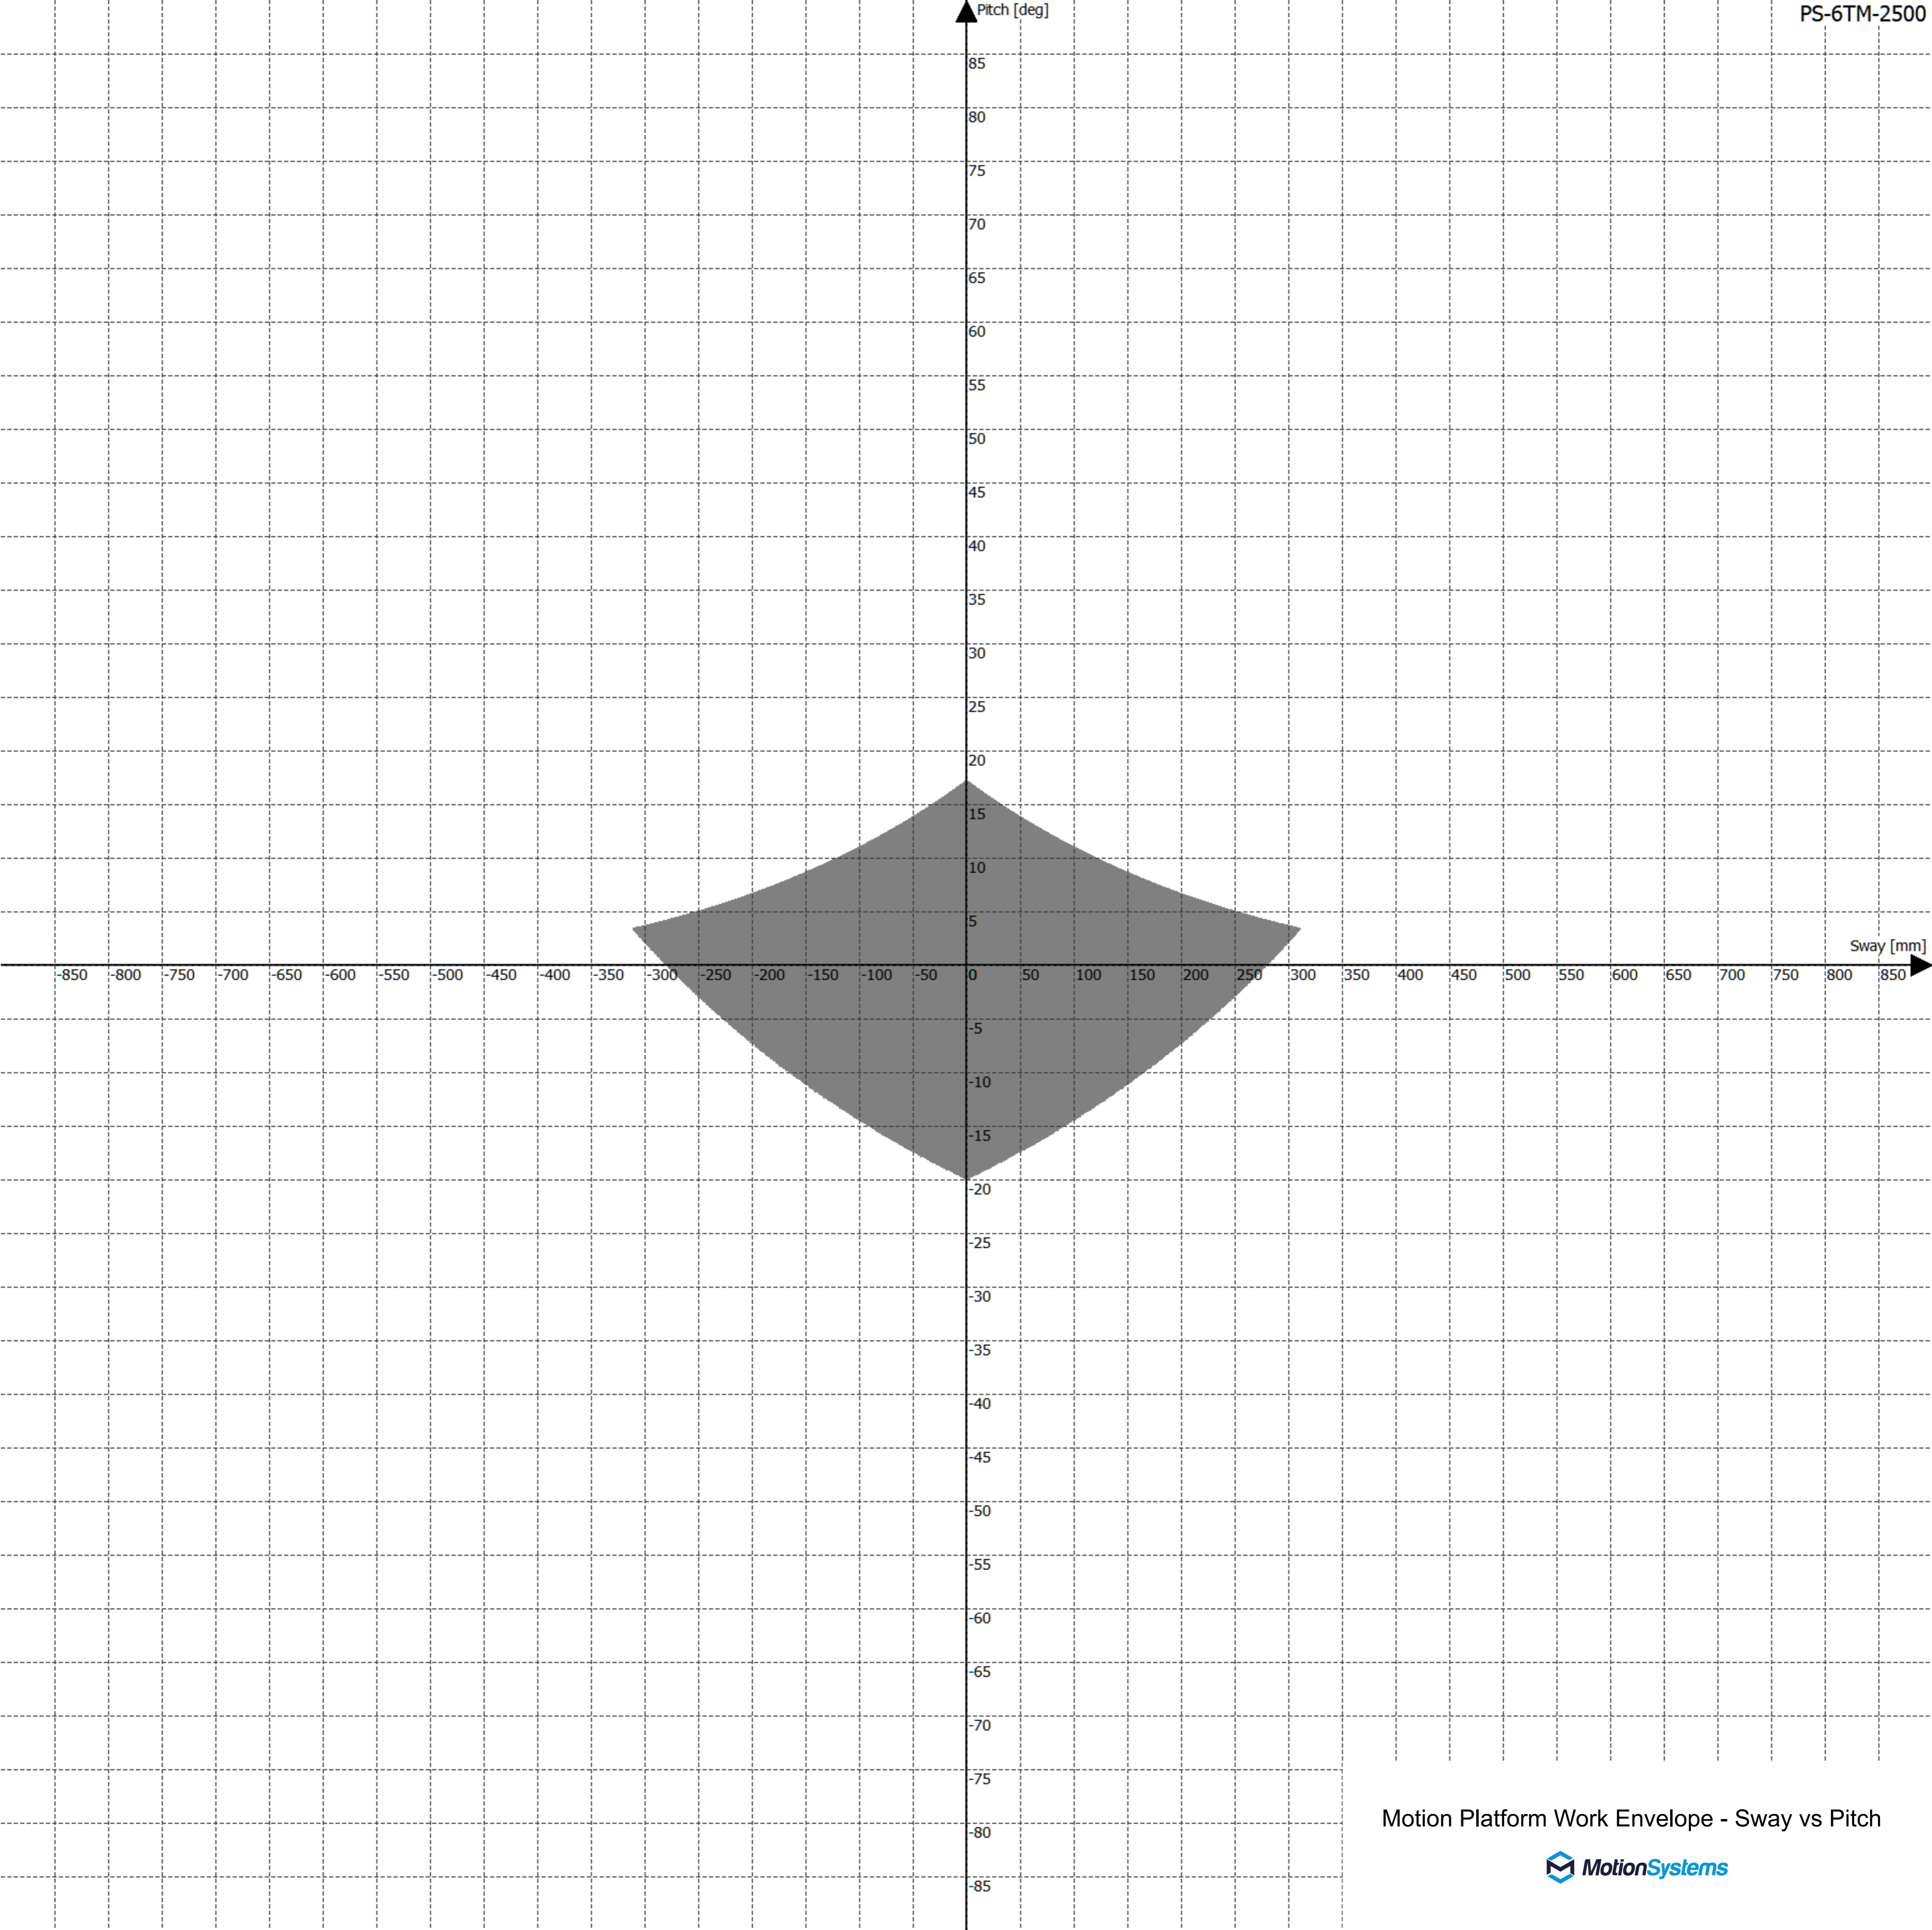

Motion Platform Work Envelope - Sway vs Pitch



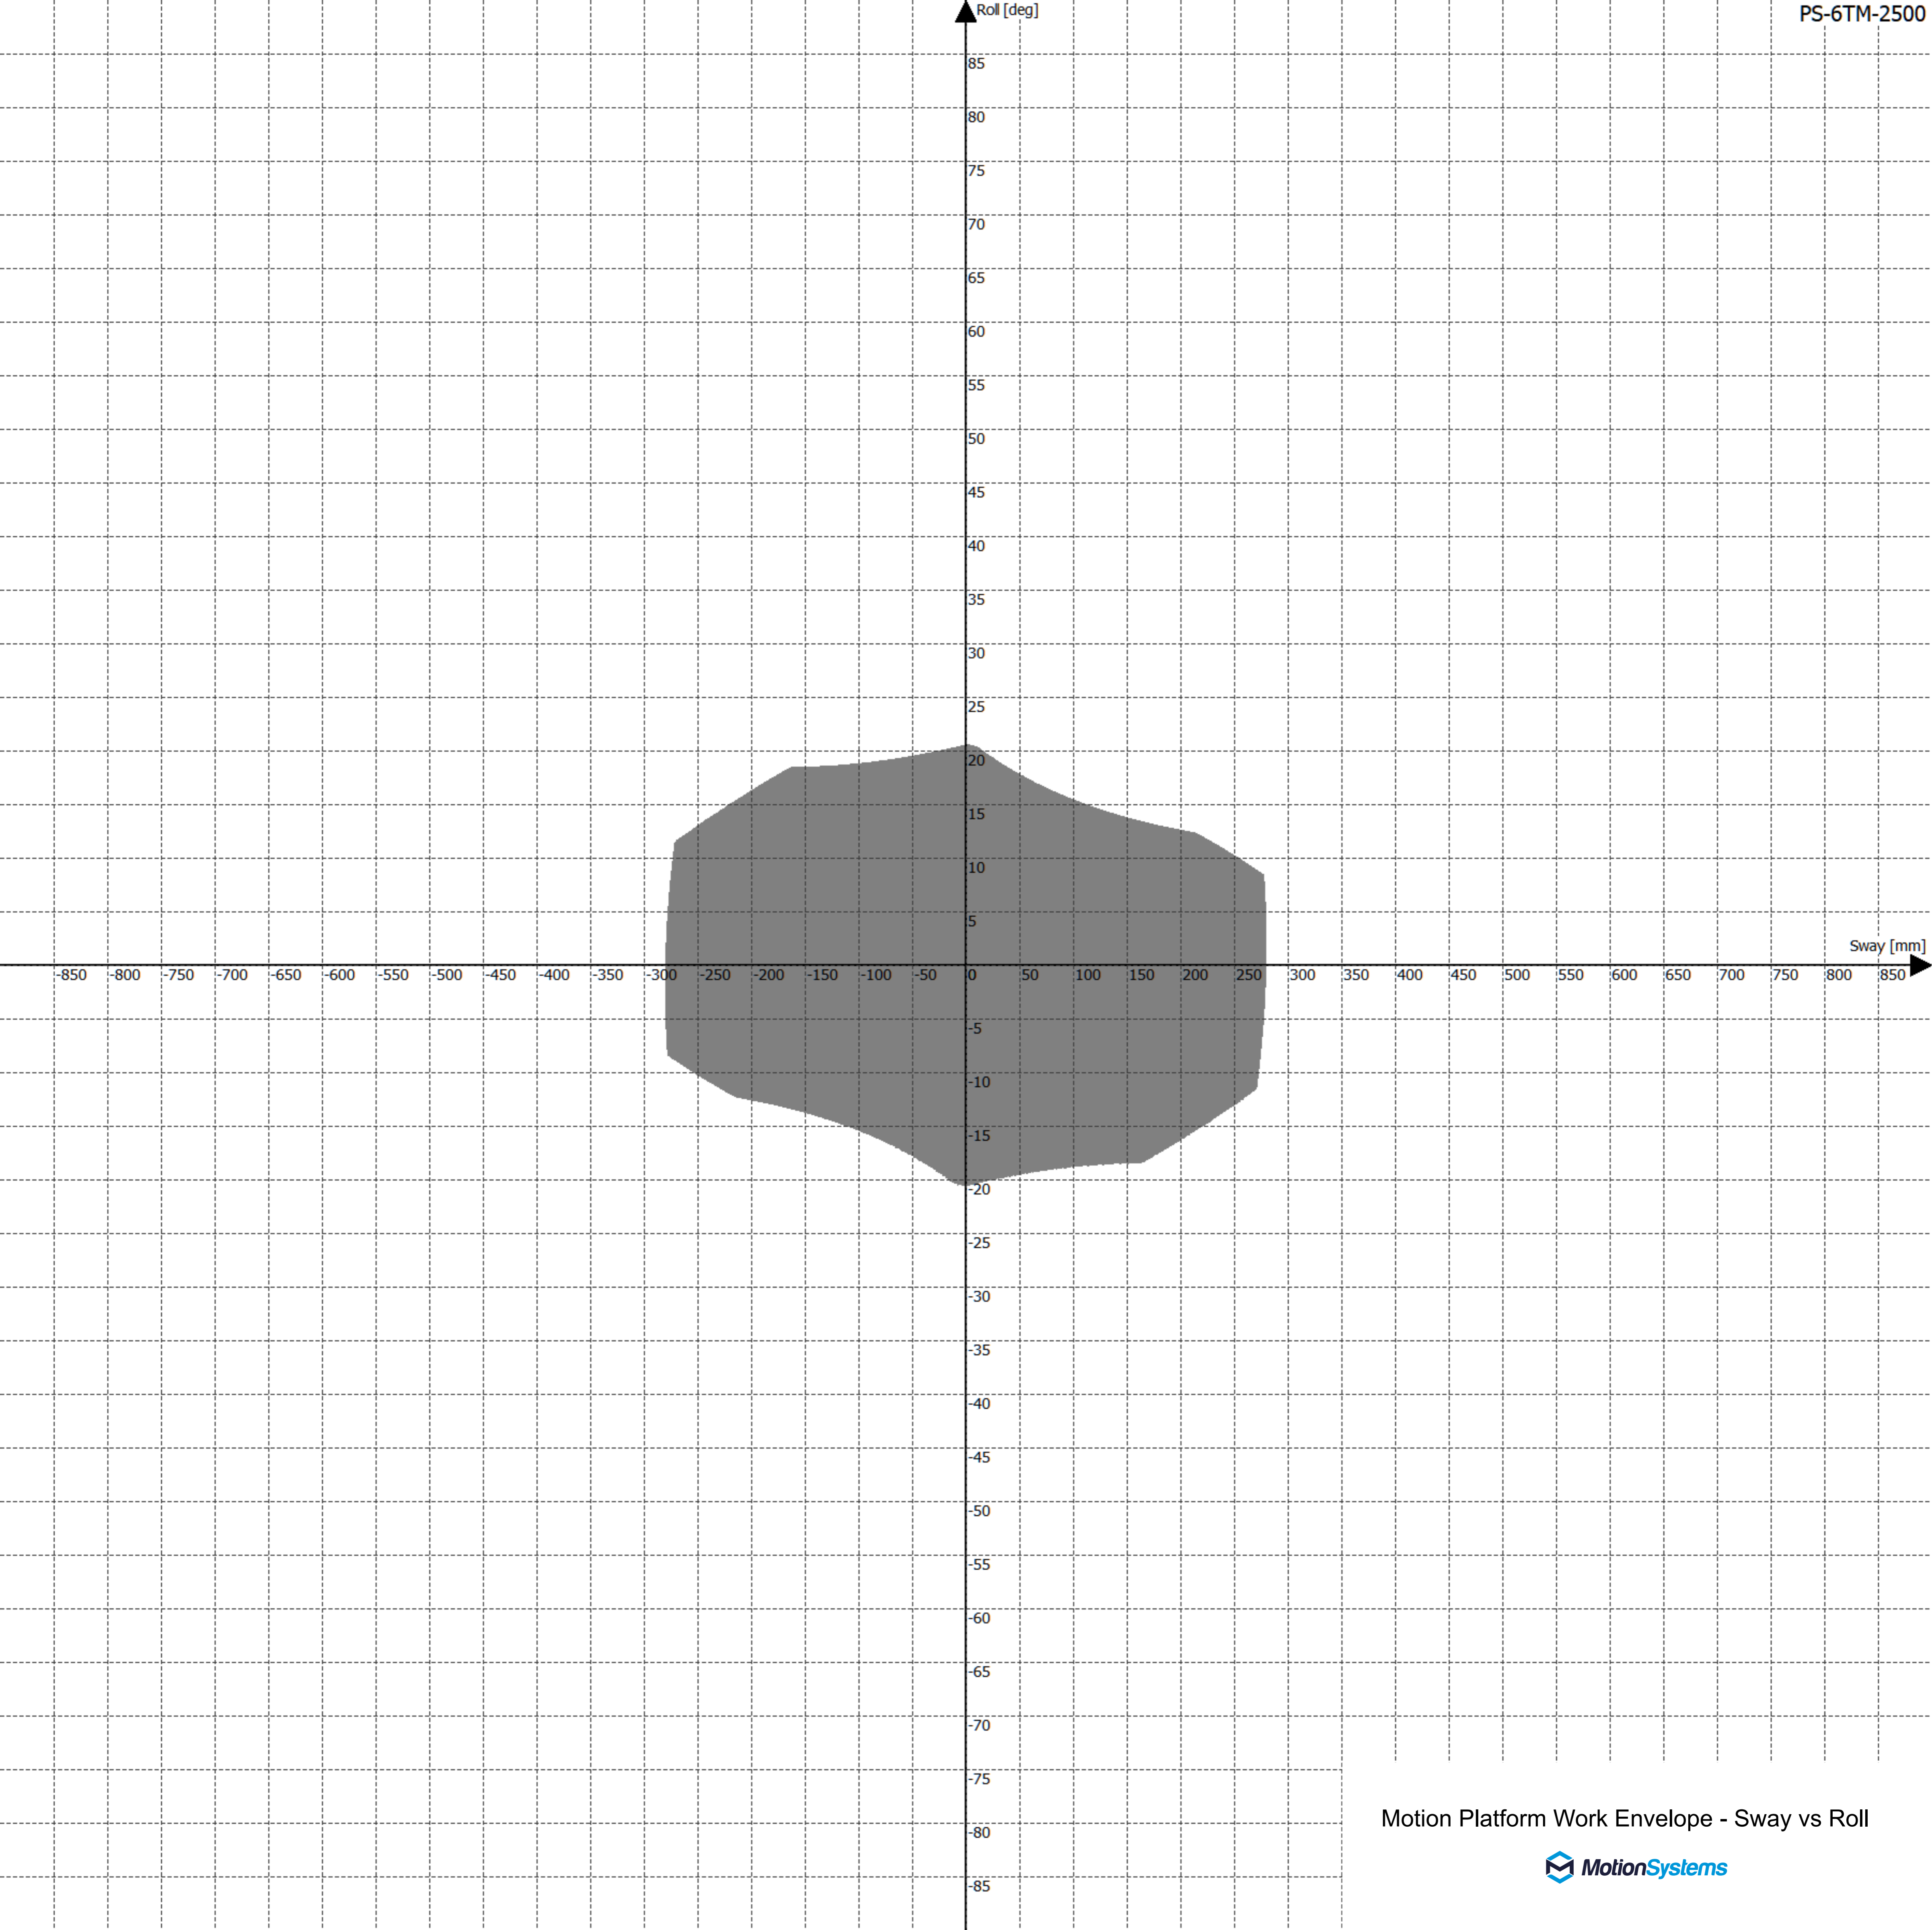

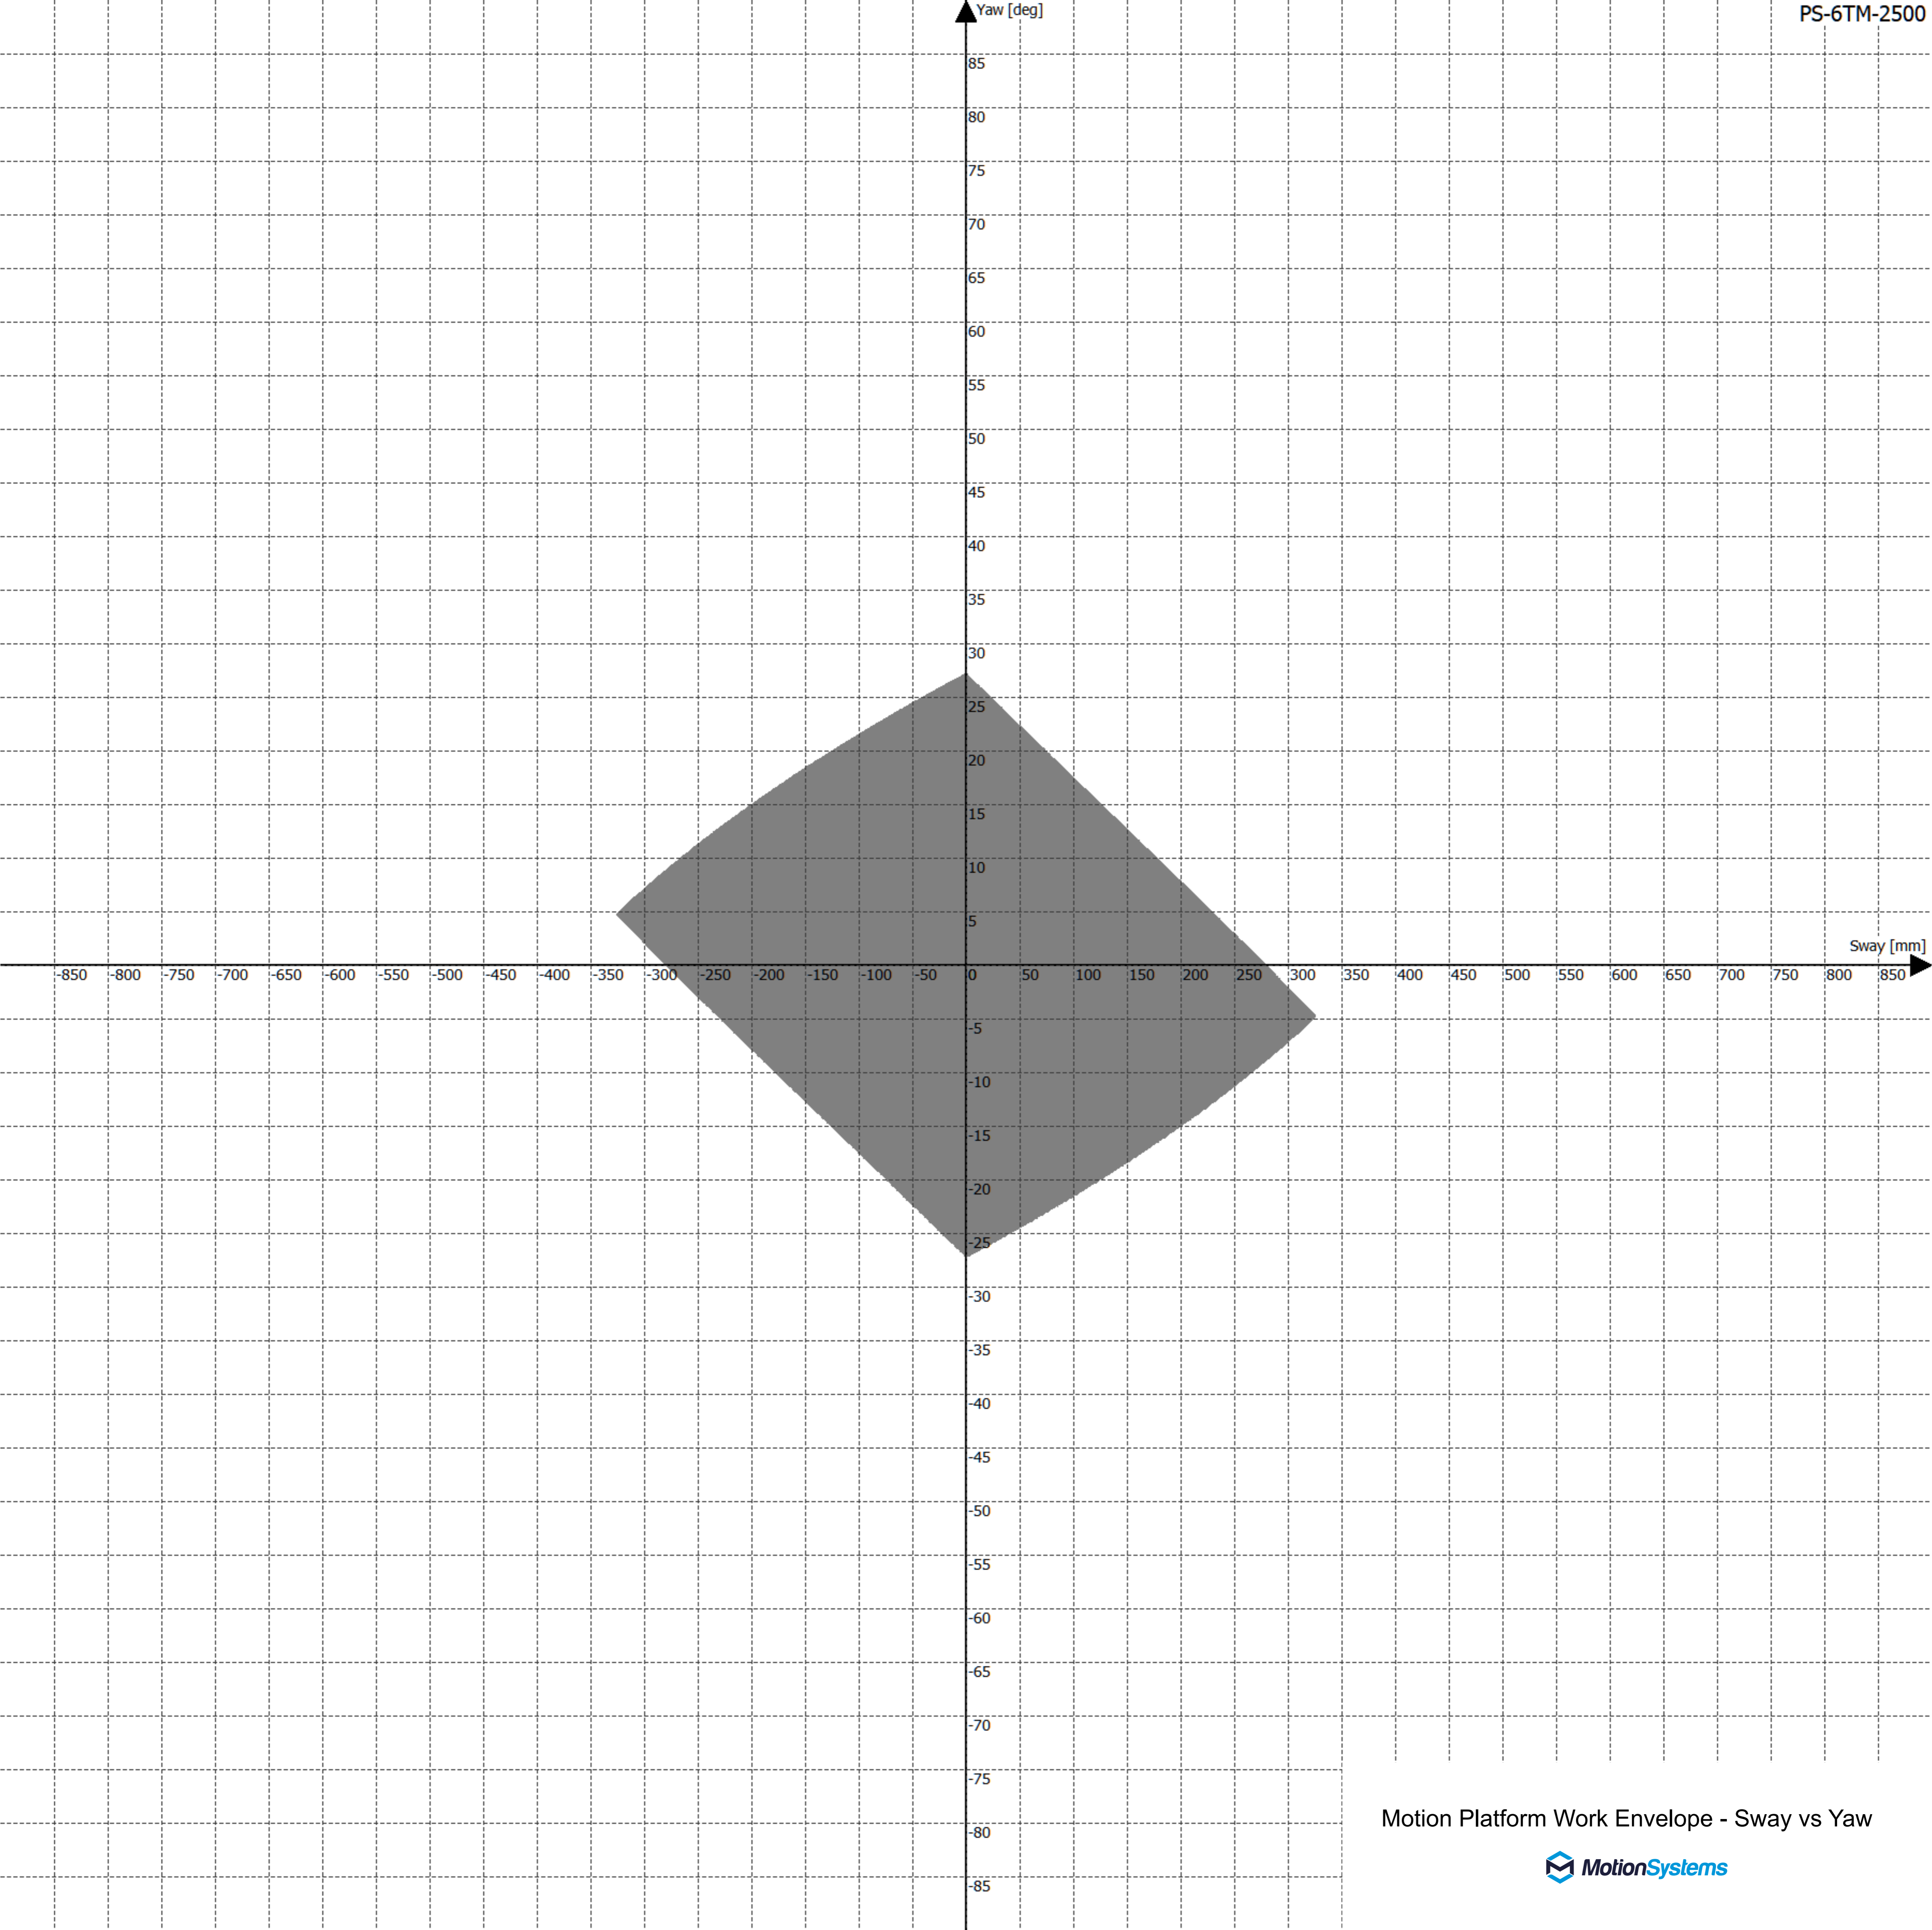

Motion Platform Work Envelope - Sway vs Yaw

